

FORM NUMBER: L-2
DATE: 1/25/80
REVISED:

WARREN//SHERER

INSTALLATION & OPERATION MANUAL

MODEL:

**L5(F;A), 15F
FROZEN FOOD ICE CREAM
(AIR DEFROST)**

THIS REFRIGERATOR CONFORMS TO THE COMMERCIAL
REFRIGERATOR MANUFACTURERS ASSOCIATION HEALTH AND
SANITATION STANDARD.

CRS-SI-78

WARREN//SHERER

DIVISION OF KYSOR INDUSTRIAL CORPORATION

1600 ROCKDALE INDUSTRIAL BLVD., CONYERS, GEORGIA 30207 / 404•483•5600

10/10/10

GENERAL INFORMATION

APPLICATION: These multiple shelf freezers were designed to merchandise frozen food L5, L5F, L5A, L5FA and ice cream ISF. These freezers have been designed for use in air conditioned stores where temperatures and humidity are maintained at or below 75° dry bulb and not higher than 64° wet bulb (55° relative humidity)..

<u>MODEL</u>	<u>DESCRIPTION</u>	<u>SERIAL NUMBER DESIGNATION</u>
L5	Five deck frozen food merchandiser (low front) (electric or hot gas defrost)	748
L5F	Five deck frozen food merchandisers (high front) (electric or hot gas defrost)	750
L5A	Five deck frozen food merchandiser (low front) (air defrost)	749-B
L5FA	Five deck frozen food merchandiser (high front) (air defrost)	751-B
ISF	Five deck ice cream merchandisers (high front) (electric or hot gas defrost)	752

SHIPPING DAMAGE: All equipment should be examined for shipping damage before and during unloading. If there is any damage, the carrier should be notified immediately and an inspection requested. The delivery receipt "must" be noted that the equipment was received damaged. If damage is of a concealed nature you must contact the carrier immediately or no later than three (3) days following delivery. A claim must be filed with the carrier, by the consignee for all damage.

NOTE: Your equipment, when delivered, will have a sticker attached advising what must be done to report any damage.

CLEANING CASE: To insure minimum maintenance costs, cabinet should be thoroughly emptied and washed out every 3 months. (Shut off power to cabinet before cleaning). A mild soap and water solution is recommended for enameled surfaces of the case. Do not use cleaner containing abrasive ingredients which will scratch or dull finish. The waste outlet should be flushed with a bucket of water following each cleaning.

CAUTION: Do not overflow waste outlet. The two outer honeycombs should be inspected and cleaned as necessary every six months. Also see Page 2 (honeycomb). Refer to health and sanitation instructions at the rear of this manual for more cleaning information.

DRAFTS: Drafts passing in front of freezer must be eliminated or operation will be seriously affected. Do not allow air conditioning grilles, electric fans, open doors or windows, etc., to create air currents past the cabinet in excess of 50 FPM.

WASTE OUTLET:

LOCATION: A 1" MPT drain tee is located at the front toe space at the center of the cabinet.

WATER SEAL: A water seal is furnished with each cabinet, and should be installed as near the cabinet as practical. CAUTION: DO NOT allow a second water seal to be installed in series with the cabinet waste outlet furnished or cabinet will not drain properly.

REFRIGERATED JET: 760 F.P.M. Low Front Cabinets
 720 F.P.M. High Front Cabinets

FIRST GUARD JET: 560 F.P.M. High & Low Front Cabinets

SECOND GUARD JET: 500 F.P.M. High & Low Front Cabinets

LIGHT BALLASTS: Light ballasts for lights are located in the canopy. The canopy panel is held in place with sheet metal screws and must be removed to replace the ballast.

MERCHANDISE: Allow freezer to operate 4 to 5 hours before loading cabinet with merchandise. Merchandise should be kept in back of package stops and load line on all shelves. Package should be kept from covering return inlet in bottom compartment or operation will be impaired.

CAUTION: In its condition as shipped and after proper installation, this equipment is not inherently dangerous. However, it is designed for connection to high voltage outlets and should, therefore, be installed only by a licensed electrician and in accordance with the instructions contained in this manual. A failure to follow these instructions might create an electrical hazard. In addition be sure to seal around openings and not leave any exposed metal edges with sharp burrs, etc.

ASSEMBLING FREEZER

JOINING FREEZERS: Two or more cases may be joined to form a continuous lineup. Plexiglass dividers are required between cabinets when operated on separate condensing units, or systems on different defrost periods. Instructions for joining two or more cabinets will be found in the joining kit box and also in this manual.

LEVELING: Freezers must be located on a firmly based floor and carefully leveled within plus or minus 1/16" as checked at return ducts, using blocks or shims, if necessary. Check to be sure water will drain satisfactorily from cabinet before cabinet is put into operation.

CLEARANCE: If cases are to be located along an outside uninsulated wall, provisions should be made to ventilate or heat the dead air space between wall and case. If cases are located back to back, or if the end of case is adjacent to a wall or another fixture, the same provision for ventilation is necessary. (Minimum of 3" clearance required between cases and wall or other cases.)

CONTROLS

<u>ITEM #</u>	<u>CONTROL</u>	<u>LOCATION</u>	<u>ADJUSTMENT</u>
35	Temp. Control	L.H. end of cabinet canopy (on top)	-10° cut-out (FF)
	Hi-Low Pressure	On condensing unit	High 315 # (F502) Low 30 # (cut-i) 0 # (cut-o)
	Water Regulating Valve	On condensing unit	Adjust valve to maintain 200-225 for F502

<u>ITEM #</u>	<u>CONTROL</u>	<u>LOCATION</u>	<u>ADJUSTMENT</u>
21	Expansion valve (F502) (FF)	R.H. end of cabinet in coil compartment	*Adjust to 8° superheat
24	Oil Pressure	At condensing unit	Non-adjustable
34	Defrost termination Thermo-Disc	11" from R.H. end (behind 4" plastic cover)	Non-adjustable (set @ 45° ± 3)
48	Defrost Relay	Behind removable lower fan panel	None

*NOTE: To adjust superheat, place thermocouple under expansion valve bulb. Read suction pressure as near coil as possible. (If at condensing unit estimate suction line loss at 2 PSIG). Convert coil suction pressure to temperature. The difference between coil temperature and the thermocouple temperature is superheat. (Use average superheat when the expansion valve is hunting).

Do not adjust superheat until cases have pulled down to operating temperature and never open or close valve over 1/2 turn between adjustments and allow 10 minutes or more between adjustments.

TEMPERATURE CONTROL: The temperature control is located at the left hand end of canopy and is factory set at the approximate setting required for each cabinet. (Check control setting by thermometer even though control is set approximately.)

DEFROST CONTROLS (AIR DEFROST L5A MODELS)

If the cabinet is an L5A model which is an air defrost type, the defrost cycle is accomplished as follows:

1. At a preset time the time clock opens the condensing unit circuit and energizes the defrost relay which reverses the direction of the first guard fans.
2. The condensing unit remains off until the coil temperature reaches the 45° setting. The thermo-disc closes activating the solenoid in the time clock which returns the cabinet to the refrigeration cycle. The relay coil is also deactivated which returns the first guard fans to its original rotation.
3. The defrost timer is equipped with a fail-safe device which will terminate the defrost cycle in the event of a malfunction of the defrost termination control. A fail safe setting of 60 min. is recommended. The defrost time will vary from 21 min. with 55% R.H. ambient to 48 min. with 15% R.H. ambient. This is due to the lower humidity air having less BTU per lb. of dry air (Enthalpy). It is therefore recommended that a fail safe of 60 min. be used to prevent the defrost from being terminated before the coil is free of frost.
4. Each cabinet has a thermo-disc which closes at 45° which is mounted on top of the coil (11" from the right hand end.) The thermo-discs of all cabinets using the same condensing unit must be wired in series.

DEFROST CONTROLS (ELECTRIC DEFROST L5 MODELS)

1. At a preset time the time clock opens the condensing unit circuit and energizes the defrost heaters.
2. The condensing unit remains off until the coil temperature reaches the 45° thermo-disc setting. The thermo-disc closes, activating the time clock solenoid which terminates the defrost heat and returns the cabinet to the refrigeration cycle.
3. Set the fail safe for 30 min. for electric defrosts.
4. Same as 4 under air defrost.
5. Defrost circuits are brought out of the cabinet and are connected as per the electrical diagram in the back of this manual.

DEFROST PERIODS: Under normal design conditions, (75° -55% R.H.), we recommend 4 defrost periods per day. In some instances, it may be possible to maintain desired temperature with 2 or 3 defrost per day. This can be realized, generally by reducing the number of defrost periods necessary as the humidity is reduced, (the lower the humidity, the fewer number of defrost periods are needed). We recommend the fewest number of defrosts possible commensurate with the temperature desired in the case and the ambient temperature and humidity of the store. CAUTION: When the number of defrost cycles are lower than the normal number (4 to 6) the fail safe settings must be adjusted to a longer setting (maximum of 60 minutes). (NOTE: If more than 4 defrost per day are required, check store conditions.

OPERATING INSTRUCTIONS FOR DEFROST TIMER SETTING

1. Place defrost pins in outer (24 hour) dial at 6-hour intervals. (55% or higher RH)
2. To set fail-safe (inside dial), push down and rotate pointer to desired setting.
3. To set time of day, grasp knob at center of inner dial and rotate it counter-clockwise. This will rotate the outer dial. Line up correct time of day on the outer dial with the time pointer. Rotate inner dial only. CAUTION: Install and operate in vertical position only and be sure all pins are tightened securely. Use screwdriver to tighten pins.

REFRIGERATION

REFRIGERATION CONNECTIONS: 1-1/8" suction and 3/8" liquid refrigeration lines terminate under the center bottom pans in the refrigerated circuit. These size lines can be extended for a distance of no more than 6 feet when connecting to the main.

IMPORTANT: Seal around line after connections are made. (It is recommended that NITROGEN flow through the lines when making all sweat connections.)

DEHYDRATION: After the refrigeration system has been pressure tested and proven leak free it is recommended that the system be dehydrated with a vacuum pump to 1000 microns for the first two evacuations and 500 microns on the third. The triple evacuation method requires evacuating the system three successive times and breaking each vacuum with dry refrigerant. Allow the pressure to rise above atmospheric pressure.

SUCTION LINE INSULATION: Insulate suction lines with at least 3/4" insulation from insulation per manufacturers recommendation.

REFRIGERANT: This freezer is operated on condensing units using R-502 refrigerant. The cabinet is furnished with R-502 expansion valve located at right hand end of the cabinet.

ELECTRICAL

All electrical connections are made in the end to end wireway. To obtain access to this wireway the front lower panel must be removed.

115-VOLT CIRCUITS: (Single Phase)

Three (3) 115 volt circuits terminate in the wireway. One circuit each provided for the lights, anti-sweat heaters and fans. The lighting circuit can be connected to a main lighting panel so lights can be shut off during closed hours. The fan motor circuit must be connected to a panel where store personnel can not shut off except in emergency. Anti-sweat heaters are to remain on at all times. Some anti-sweat heaters can be cycled by controllers. (Refer to wiring of controller at the rear of this manual).

208 VOLT CIRCUITS (For Air Defrost Models)

Two wires must be brought from the time clock terminals 3 & N (8145-20) and connected to the coil in relay which will reverse the first guard fan motors during the defrost.

TEMPERATURE AND DEFROST CONTROL

Leads from the temperature control (used for cycling condensing units) and leads from defrost control (termination defrost) and also brought into the lower wireway and are identified with tags. These must be wired and set per these instructions.

FROZEN FOOD ELECTRICAL REQUIREMENTS

	<u>L5 - L5F</u>		<u>L5A - L5FA</u>	
	<u>WATTS</u>	<u>AMPS</u>	<u>WATTS</u>	<u>AMPS</u>
-115/60/1				
Anti Sweat Heaters	510 715	4.7 (8') 7.2 (12')	510 715	4.7 7.2
Fans	275 410	3.6 (8') 5.4 (12')	260 375	3.2 4.8
Lights	270 430	2.6 (8') 4.0 (12')	270 430	2.6 4.0
208/60/3				
Defrost Heaters	4900 7350	13.6 (8') 20.4 (12')	-- --	-- --

ICE CREAM ELECTRICAL REQUIREMENTS (I5F)

	<u>WATTS</u>	<u>AMPS.</u>
Anti-Sweat Heaters	700 1060	6.1 (8') 9.2 (12')
Fans	275 410	3.6 (8') 5.4 (12')
Lights	270 430	2.4 (8') 3.6 (12')
208/60/3		
Defrost Heaters	6000 9000	16.6 (8') 24.9 (12')

10/10/10


REPAIR PARTS FOR FROZEN FOOD & ICE CREAM MODELS WITH ELECTRIC DEFROST

<u>ITEM NO.</u>	<u>PART NAME</u>	<u>PART #</u>	<u>DESCRIPTION</u>
	<u>CONTROLS</u>		
34	Thermo-disc	3-014-02-0659	14T32-F45
35	Temperature Control (for cycling)	3-014-02-0804	PENN A19AAA-1
	<u>DEFROST HEATERS (230 VOLT) L5 - L5F FROZEN FOOD</u>		
8	Coil-Calrod	3-016-04-2305 Straight	(1) 2000 Watts (8 ft.)
		3-016-04-3204 Straight	(1) 3000 Watts (12 ft.)
		3-016-04-2404 Hairpin	(2) 2000 Watts (8 ft.)
		3-016-04-3105 Hairpin	(2) 3000 Watts (12 ft.)
	<u>DEFROST HEATERS (230 VOLTS) I5F ICE CREAM</u>		
8	Coil Calrod	3-016-04-2503 Straight	(1) 2450 Watts (8 ft.)
		3-016-04-3501 Straight	(1) 3675 Watts (12 ft.)
		3-016-04-2602 Hairpin	(2) 2450 Watts (8 ft.)
		3-016-04-3600 Hairpin	(2) 3675 Watts (12 ft.)
	<u>REPAIR PARTS LIST FOR FROZEN FOOD & ICE CREAM MODELS</u>		
	<u>L5 - L5F - L5A - L5FA - I5F</u>		
	<u>FANS</u>		
*36	Motor (Morrill)	3-015-03-1606	*SPB-6EVI (ref.& 2nd guard duc
36A	Motor	9A10-39	G.E. 5KPM51BL-19A Air Defrost only.
37	7" Refrigerated jet fan blades	3-015-01-1004	FV700CW-40S (color violet)
38	7" Second guard jet fan blades	3-015-01-0808	FV700CW-20S (color gold)
37	7" First guard jet fan blades	3-015-01-1004	FV700CW-40S (color violet)
	<u>ANTI-SWEAT HEATERS (115 VOLTS)</u>		
40	Nozzle	2-265-00-0055 2-265-00-0063	83 Watts .72 amps. (8 ft.) 125 Watts 1.09 amps. (12 ft.)
12	Honeycomb LH Heater	1-216-00-0032	115 Watts 1.0 amps.
12	Honeycomb Center Heater	1-216-00-0032	115 Watts 1.0 amps.
13	Honeycomb RH heater	1-216-00-0032	115 Watts 1.0 amps.
15	Return grille heater	2-200-00-0095 2-200-00-0103	121 Watts 1.05 amps. (8 ft.) 187 Watts 1.62 Amps. (12 ft.)
44	Return Duct Heater (Ice cream model only)	2-275-00-0376 2-275-00-0384	79 98-Watts .85 amps. (12 ⁸ ft.) 78 74 Watts .64 amps. (8 ¹² ft.)

8 * Substitute motors; Any G.E. or Redmond that is a unit bearing motor 115 volt,
6 watt output and clockwise rotation

<u>ITEM NO.</u>	<u>PART NUMBER</u>	<u>PART #.</u>	<u>DESCRIPTION</u>
46	Display Liner top Overlay Panel	2-240-00-0634 2-240-00-0642	49 Watts .5 amps. (8 ft.) 88 Watts .8 amps. (12 ft.)
47	Wireway Heater	3-016-04-0101 3-016-04-0200	60 Watts .5 amps. (8 ft.) 90 Watts .8 amps. (12 ft.)
16	<u>HONEYCOMB</u> All Jets	3-019-05-0255	1/8" cell (Plastic)
18	<u>LIGHTS</u> Ballast	3-016-01-4056	Univ. 480 XLHTCP or G. E. 8G3732
19	LAMPS General Electric, Sylvania, or Westinghouse	3-016-07-3805 3-016-07-3201	F96/T12/CWX/HO 8 ft. F72/T12/CWX/HO 12 ft.
49	Lamp Shield	3-019-08-1151 3-019-08-1201	TP472S w/end caps (12 ft.) TP625S w/end cpas (8 ft.)
24	Oil Pressure Safety Switch	3-016-28-1309	PENN P45NCA-12
25	Thermometer	3-033-08-0502	Glass Stem
41	Second Jet Fan Guard	1-205-00-0050	Expanded Metal
30	Heat Exchanger	3-011-04-0502 3-011-04-0403 3-011-04-0502	B500XS (12 ft. F.F.) B200XS (8 ft. F.F.) B500XS (8 ft. & 12 ft. I.C.)
32	3" Plastic Plug Buttons (white) 4" Plastic Plug Buttons (white)	3-025-11-0101 3-025-11-0200	Refrigerated Comp't. Refrigerated Comp't.
33	Lamp Holders	3-016-06-1404 3-016-06-1503	505x91 or 464 505x92 or 465
<u>RELAY AIR DEFROST MODEL</u>			
48	Defrost Relay Relay Base Capacitor Alternate Defrost Relay	8E11-38 8E11-37 10K14-59, 10K 10K14-58 8E11-54	Octal Base Relay Octal Relay Base 370V. 5 MFD Capacitor (8') 370V. 7.5MFD Capacitor (12') DPDT 208-240V coil
<u>ANTI-SWEAT HEATERS (115VOLT) ICE CREAM MODELS</u>			
17	Honeycomb Heater (First Guard Duct)	1-216-00-0016 1-216-00-0024	83 Watt .72amps. (8ft.) 125 Watt 1.09 amps.(12ft.)

<u>ITEM NO.</u>	<u>PART NAME</u>	<u>PART #</u>	<u>DESCRIPTION</u>
	<u>VALVES F.F.</u>		
20	Expansion Valve (502)	3-009-01-1051 3-009-01-1804	Sporlan GRE-1-ZP40 (8 ft.) Sporlan GRE-1½ ZP40 (12 ft.)
	<u>VALVES I.C.</u>		
20	Expansion Valve (502)	3-009-01-1804 3-009-01-2703	Sporlan GRE-1½ ZP40 (8 ft.) Sporlan GRE-2 ZP40 (12 ft.)
**34	Hot Gas Defrost Models do not use the thermo-disc defrost termination, but a PENN. A19AAA-5 control.		

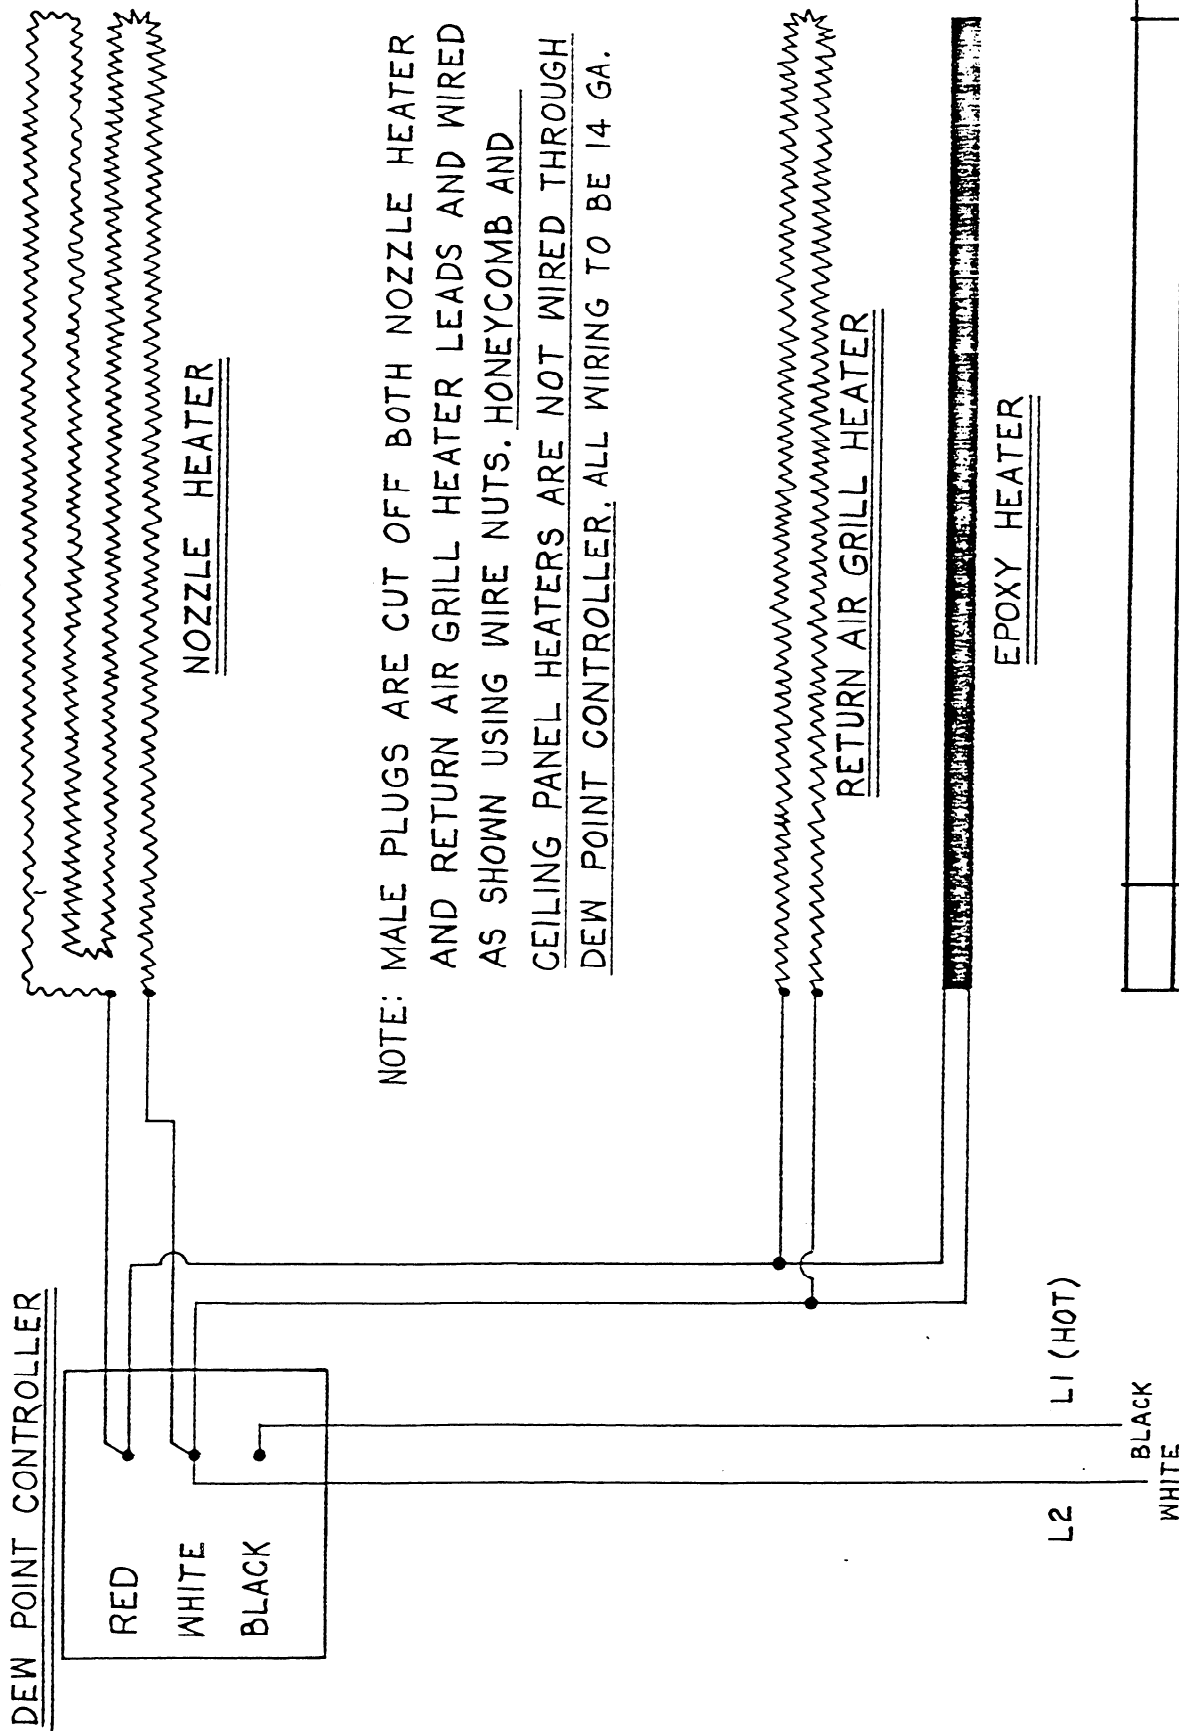


NOTE: MALE PLUGS ARE CUT OFF BOTH NOZZLE HEATER AND RETURN AIR GRILL HEATER LEADS AND WIRED AS SHOWN USING WIRE NUTS. HONEYCOMB AND CEILING PANEL HEATERS ARE NOT WIRED THROUGH DEW POINT CONTROLLER. ALL WIRING TO BE 14 GA.


115 V. TO ANTI-SWEAT HEATERS

LETTER	REVISED	DATE	BY
TITLE		DATE	
WIRING DIAGRAM			
DEW POINT CONTROLLER L4 & L5			
DATE	SCALE	DRAWN	
9-25-79	NONE	D.E.W.	
APPD. <i>[Signature]</i>		DRAWING NUMBER	
		M79150	

KVSR | **WARREN / SHERER**

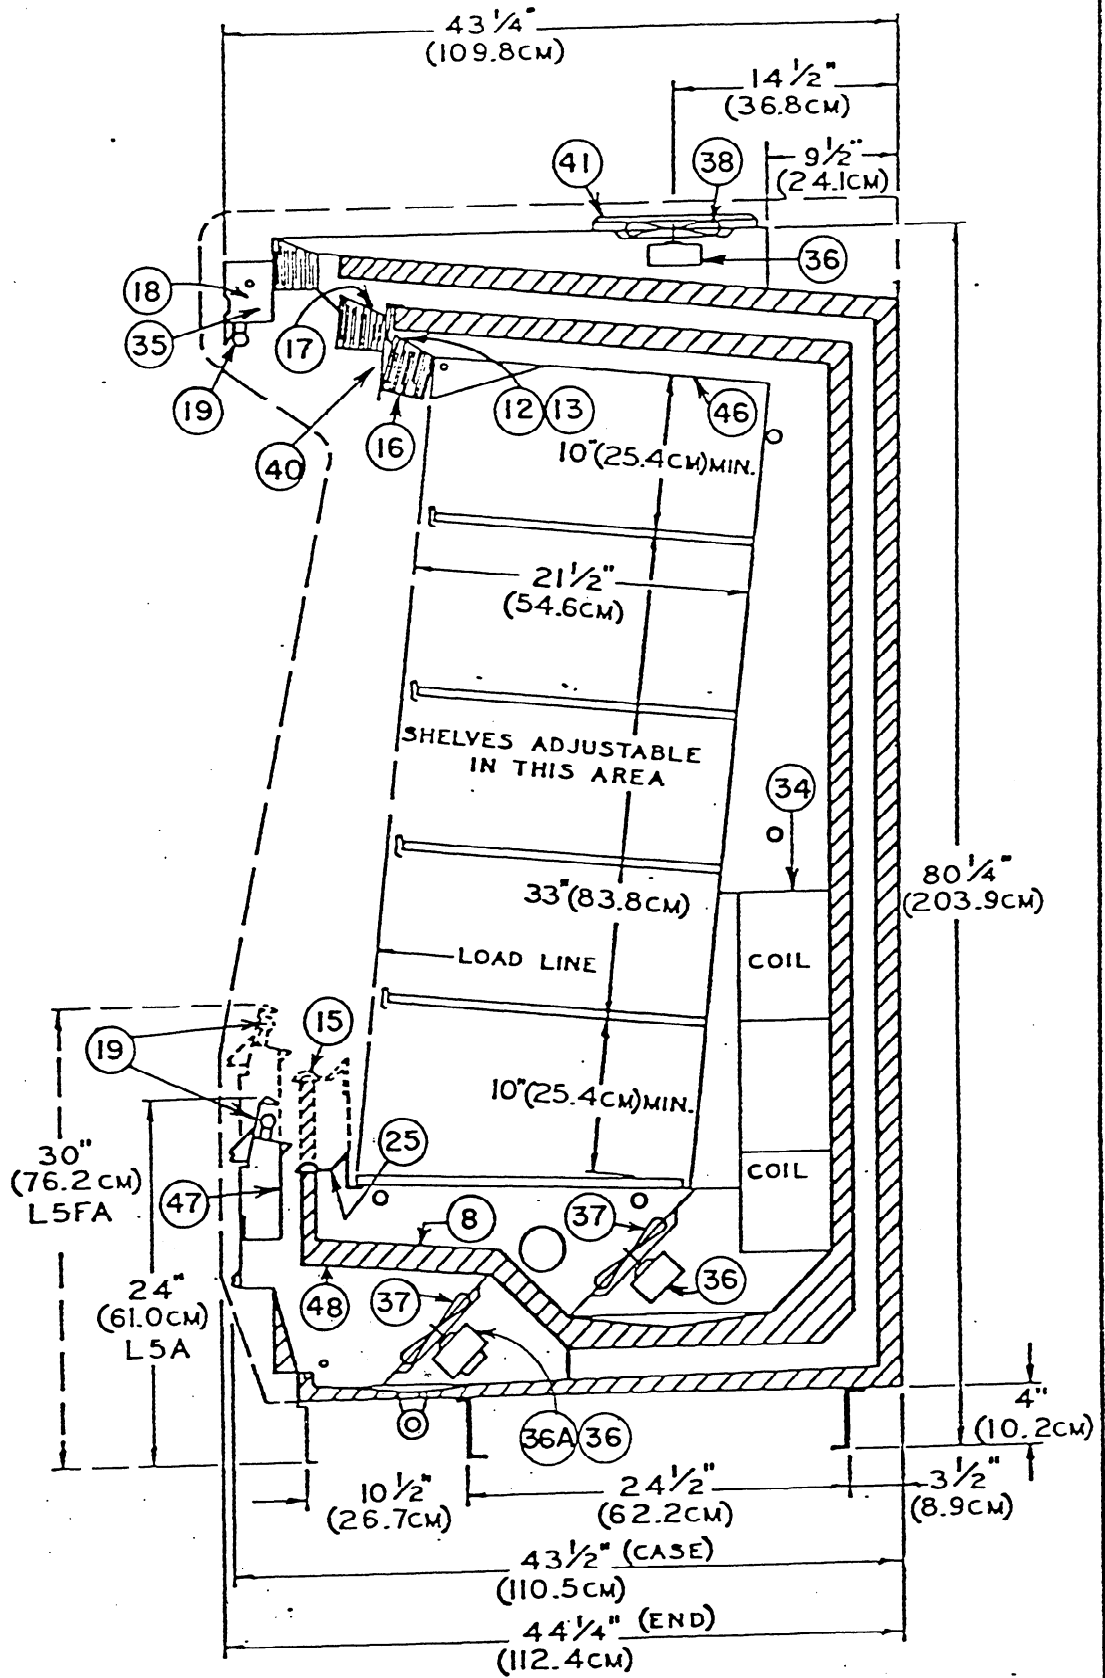



LETTER	REVISION
DATE	2-2-78
SCALE	3/8" = 1"
DRAWN	JK
APPROVED	
TITLE CROSS SECTION MODEL L5(F)A	
DRAWING NUMBER SB-78	

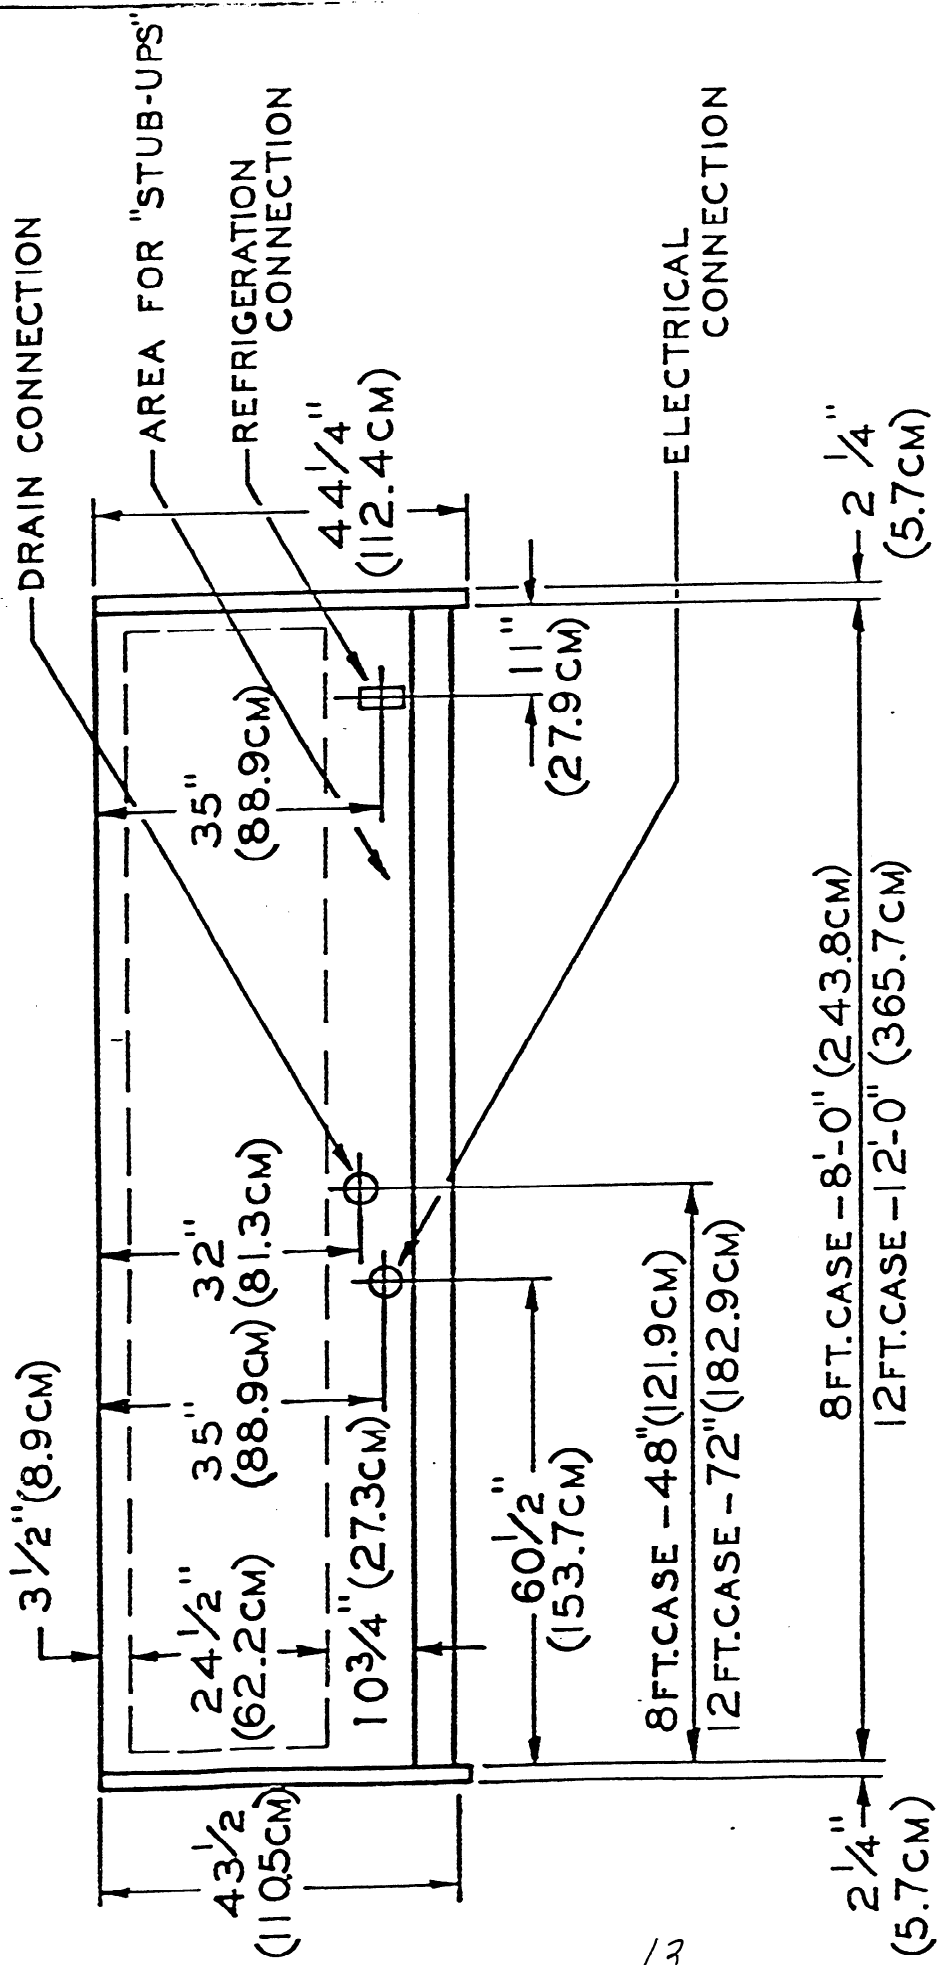


13

LETTER	REVISED	DATE	BY
DATE	TITLE		
2-2-78	PLAN VIEW		
SCALE 1/2" = 1'-0"	MODEL L5(F)A		
DRAWN			
APPD.			
		DIVISION OF LABOR INDUSTRIAL CORPORATION	
		DRAWING NUMBER	
		SA-78507	

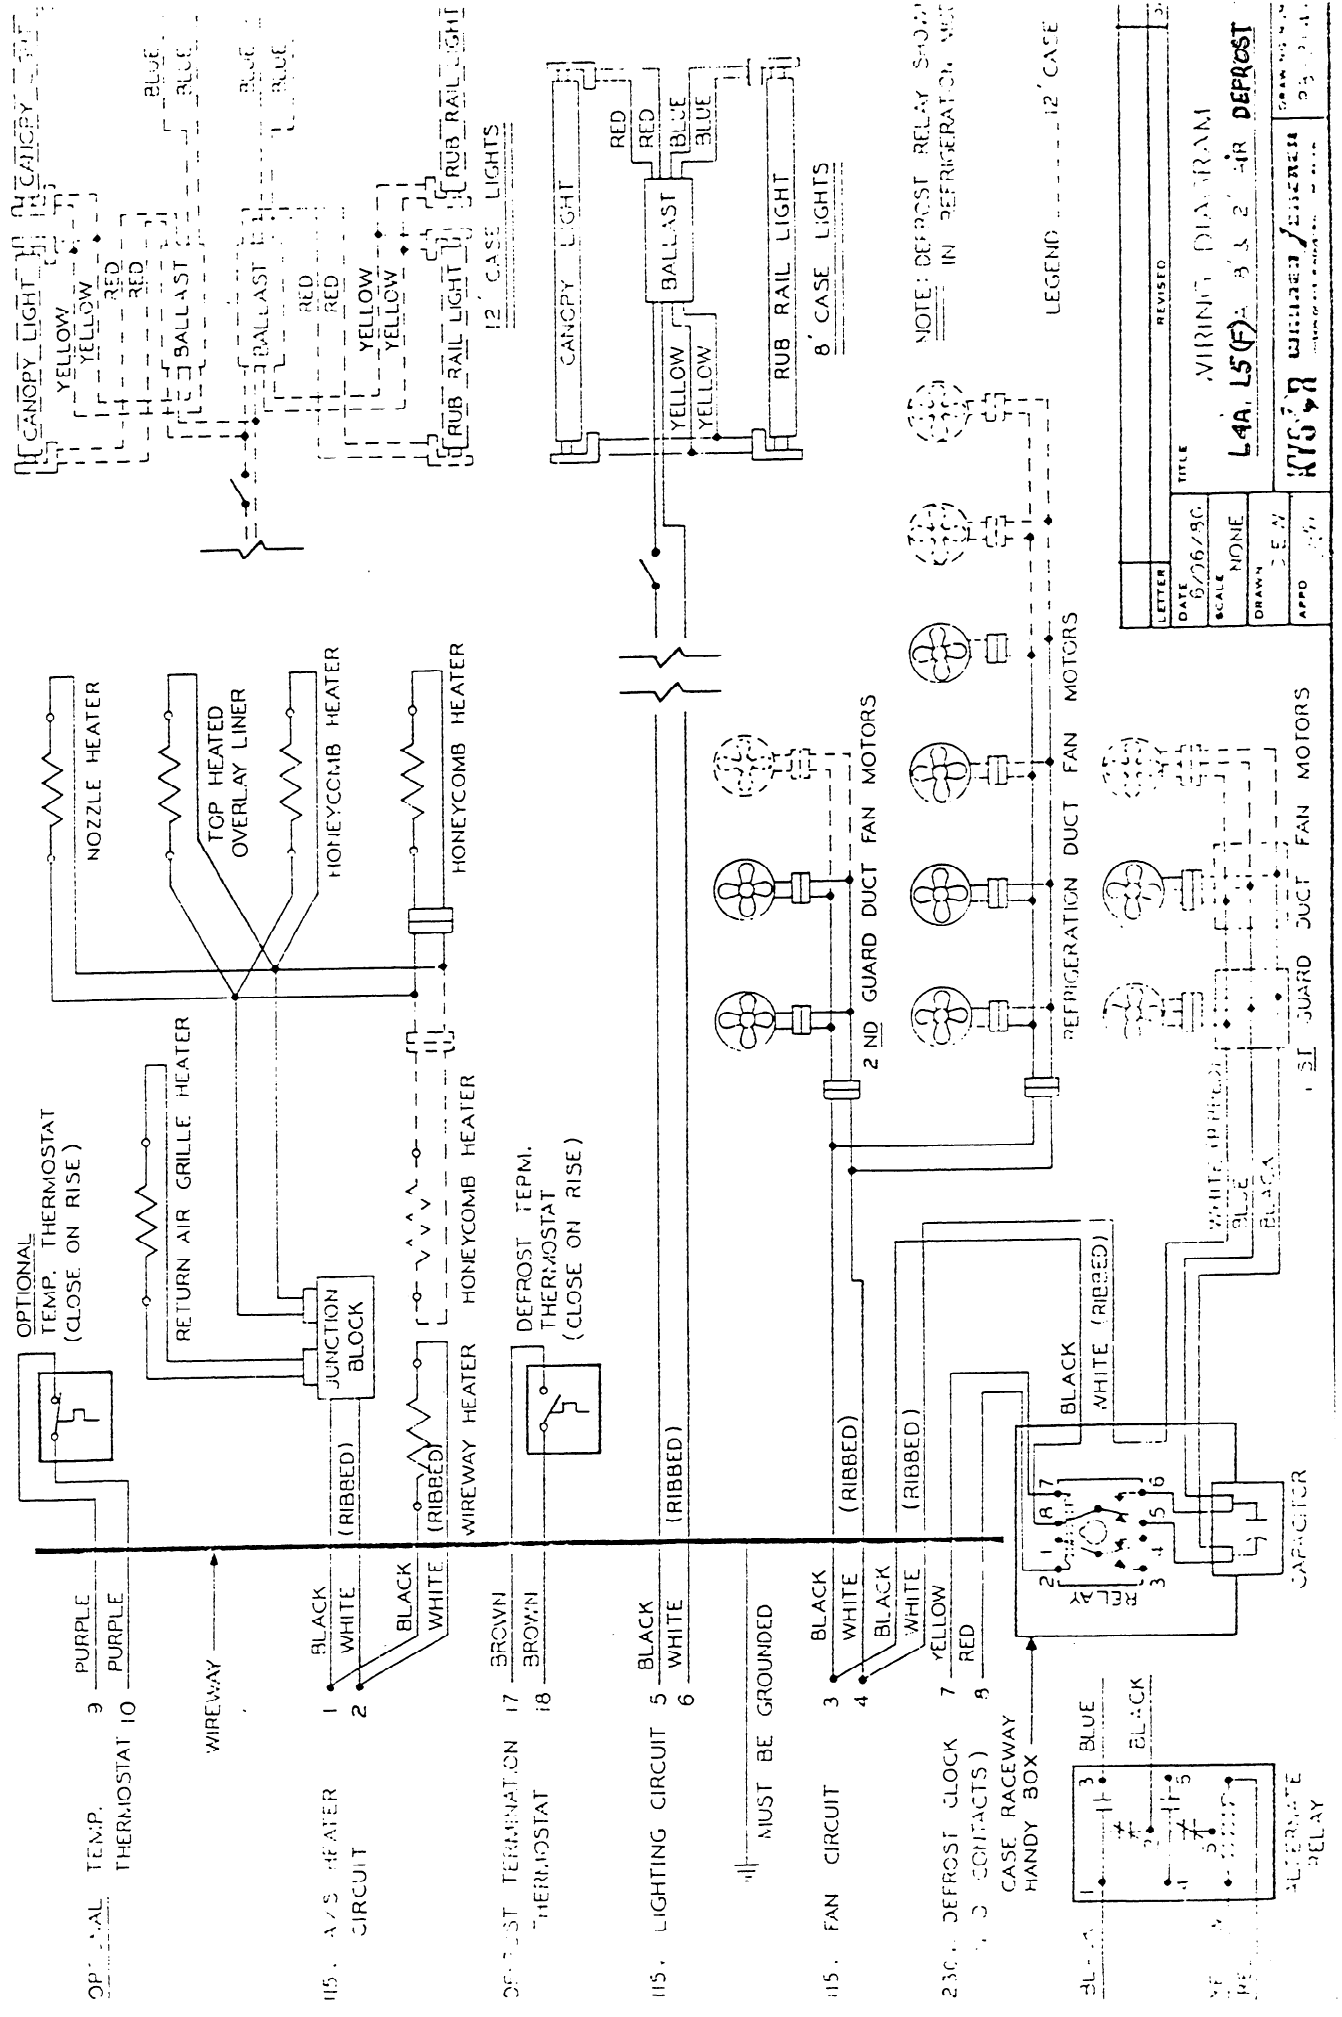

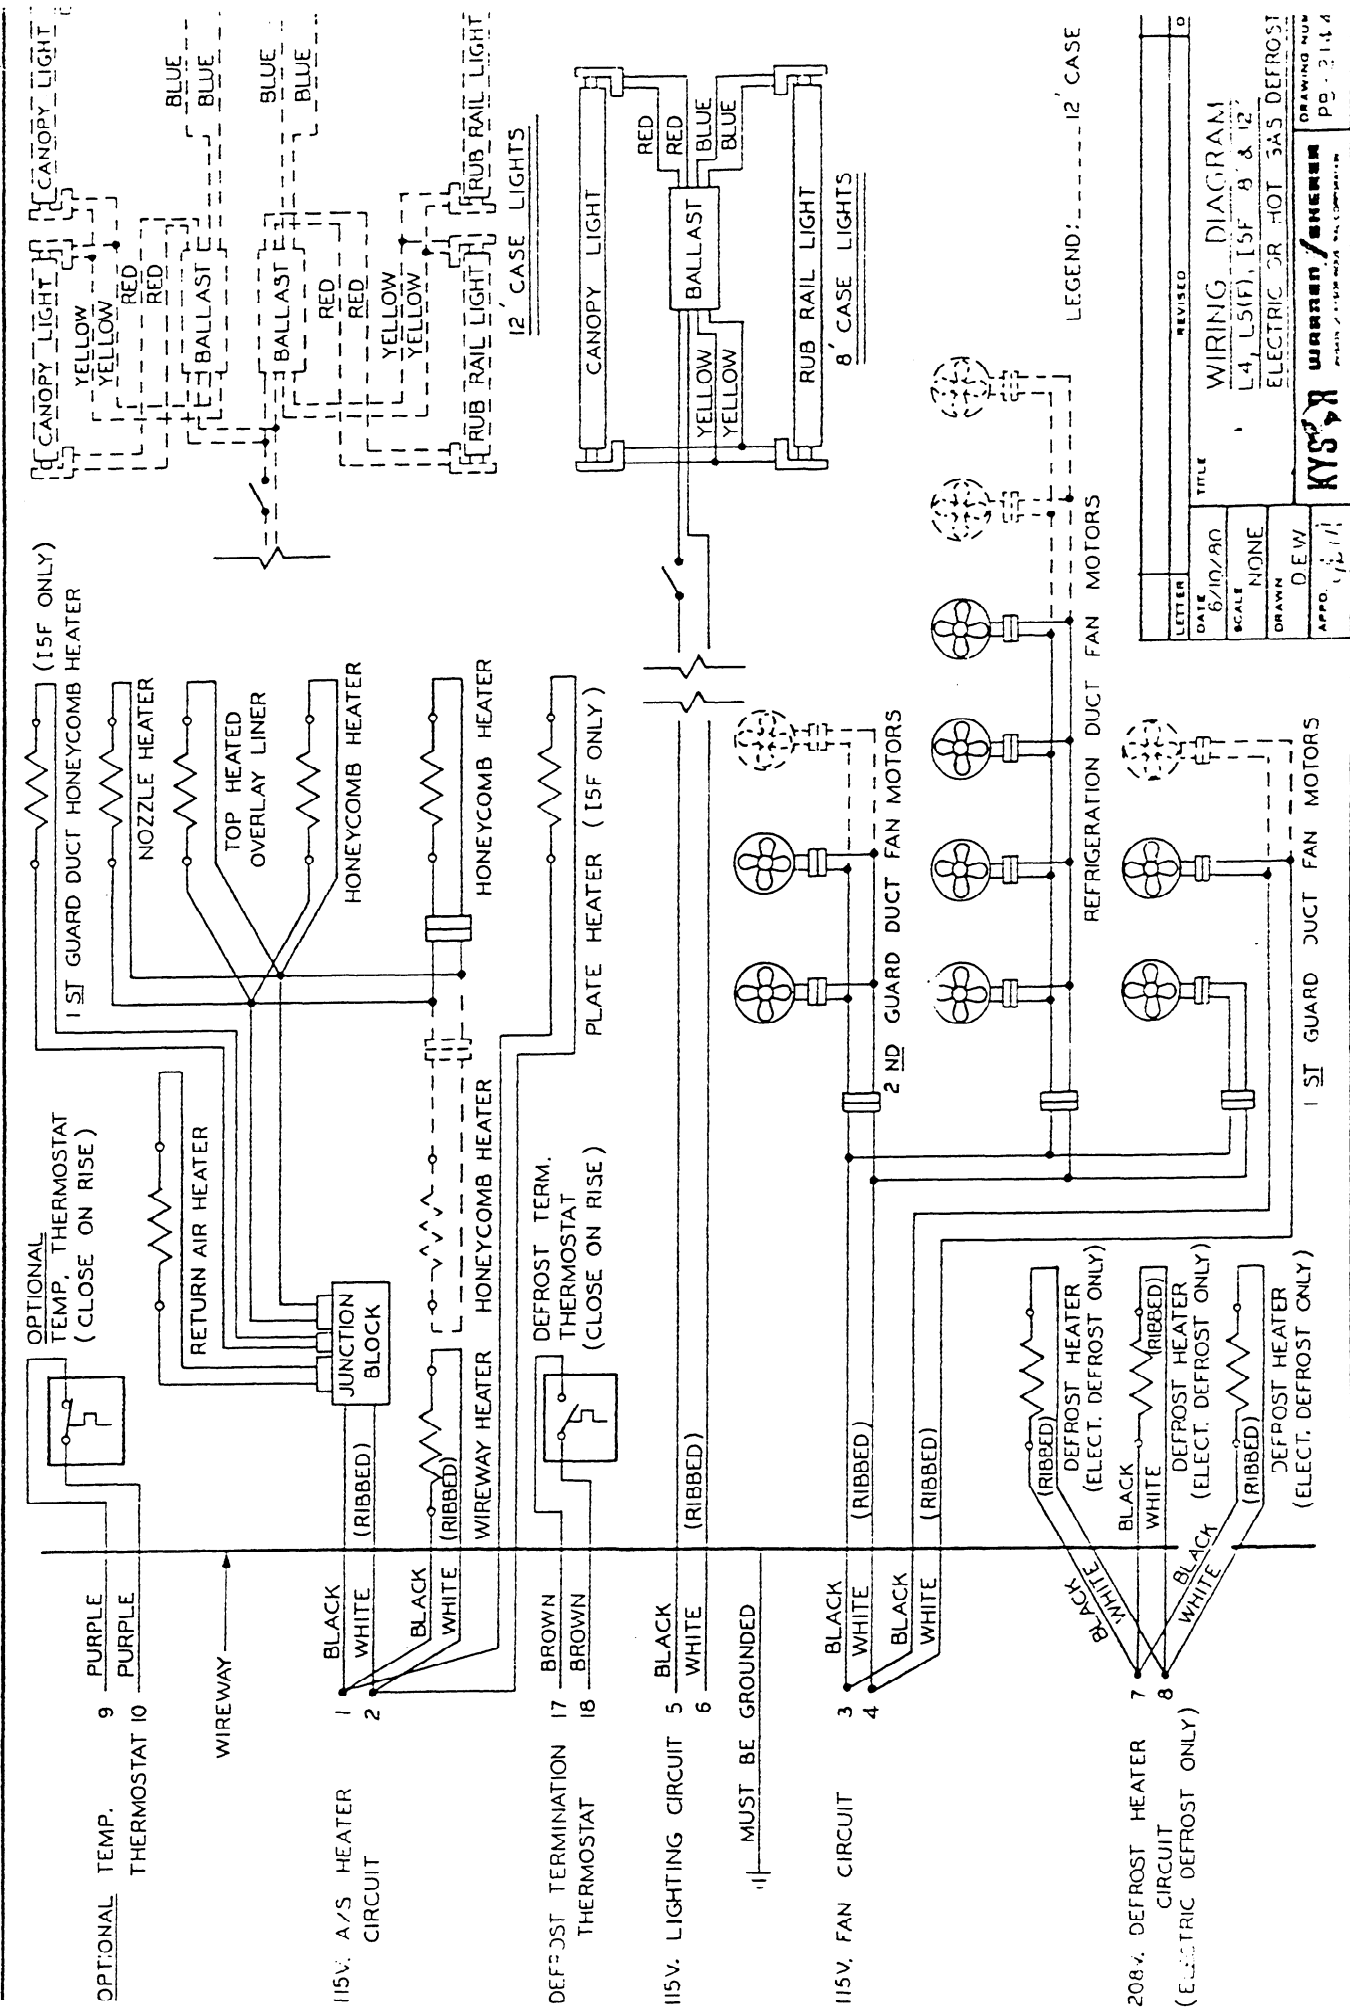


LETTER	REVISED
DATE	6/10/80
SCALE	NONE
DRAWN	D.E.W.
APPRO.	1/2/1/1
TITLE	WIRING DIAGRAM
L4, L5(F), L5F, B & 12	
ELECTRIC OR HOT GAS DEFROST	
KYS warren/generon	
DRAWING NO. PG. 2/14	

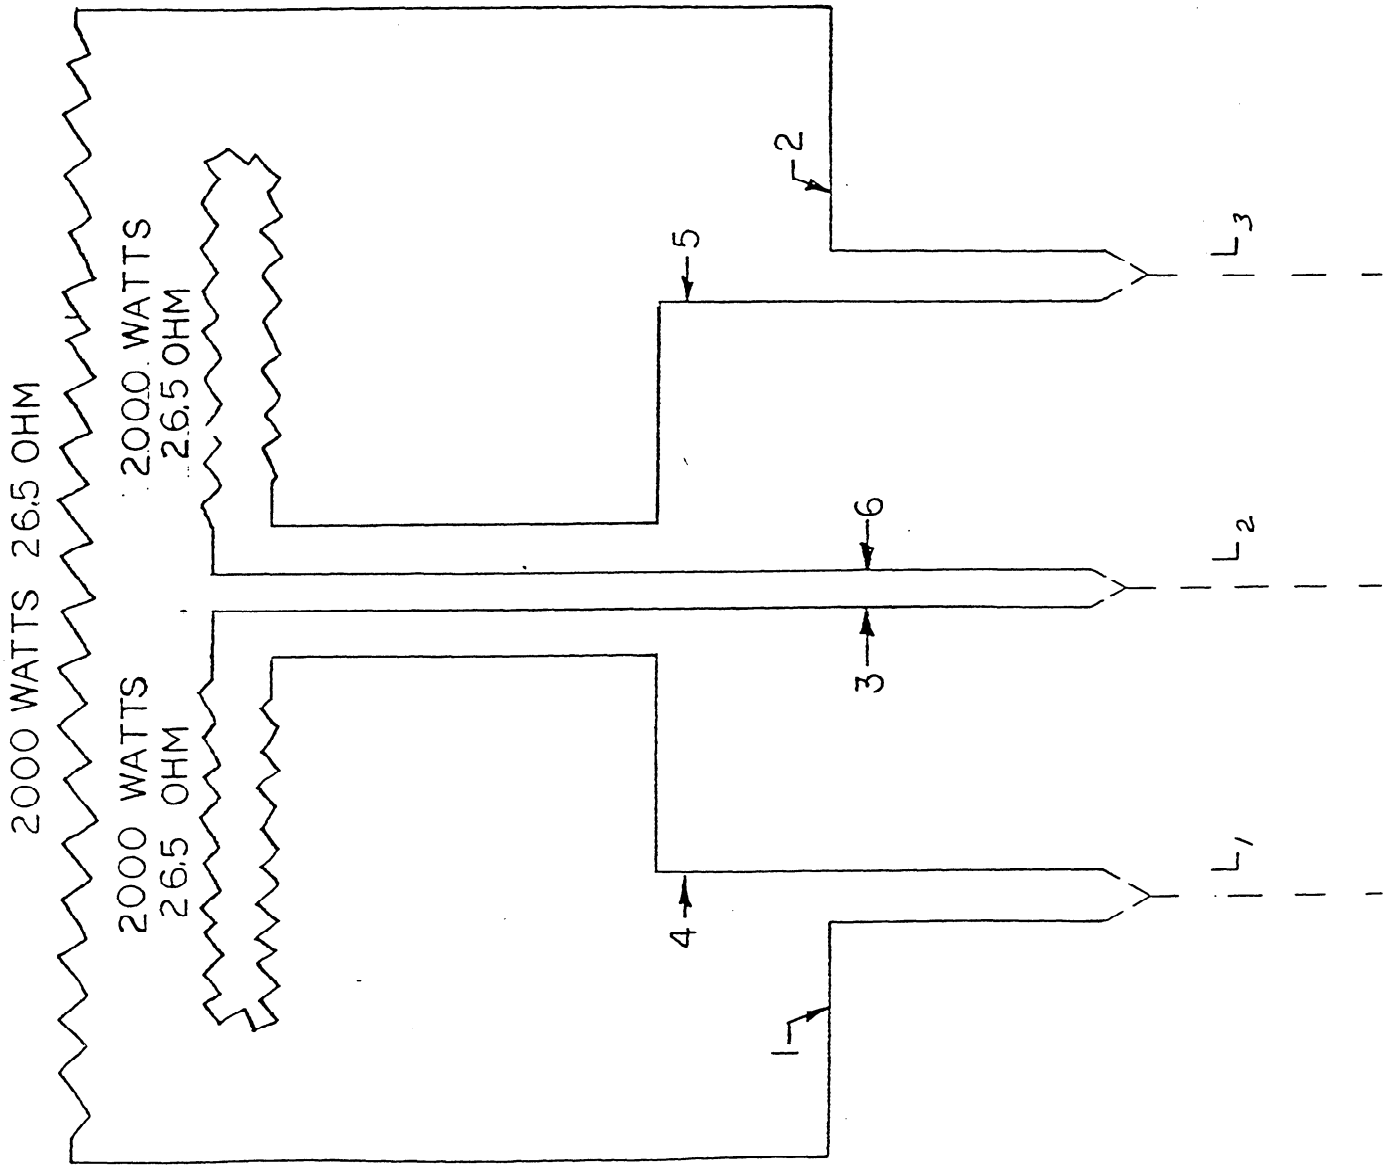

3 PHASE
DEFROST HEATER CIRCUIT

LINE	208 VOLT	220 VOLT
L ₁	13.6 AMP	14.4 AMP
L ₂	13.6 AMP	14.4 AMP
L ₃	13.6 AMP	14.4 AMP

L58

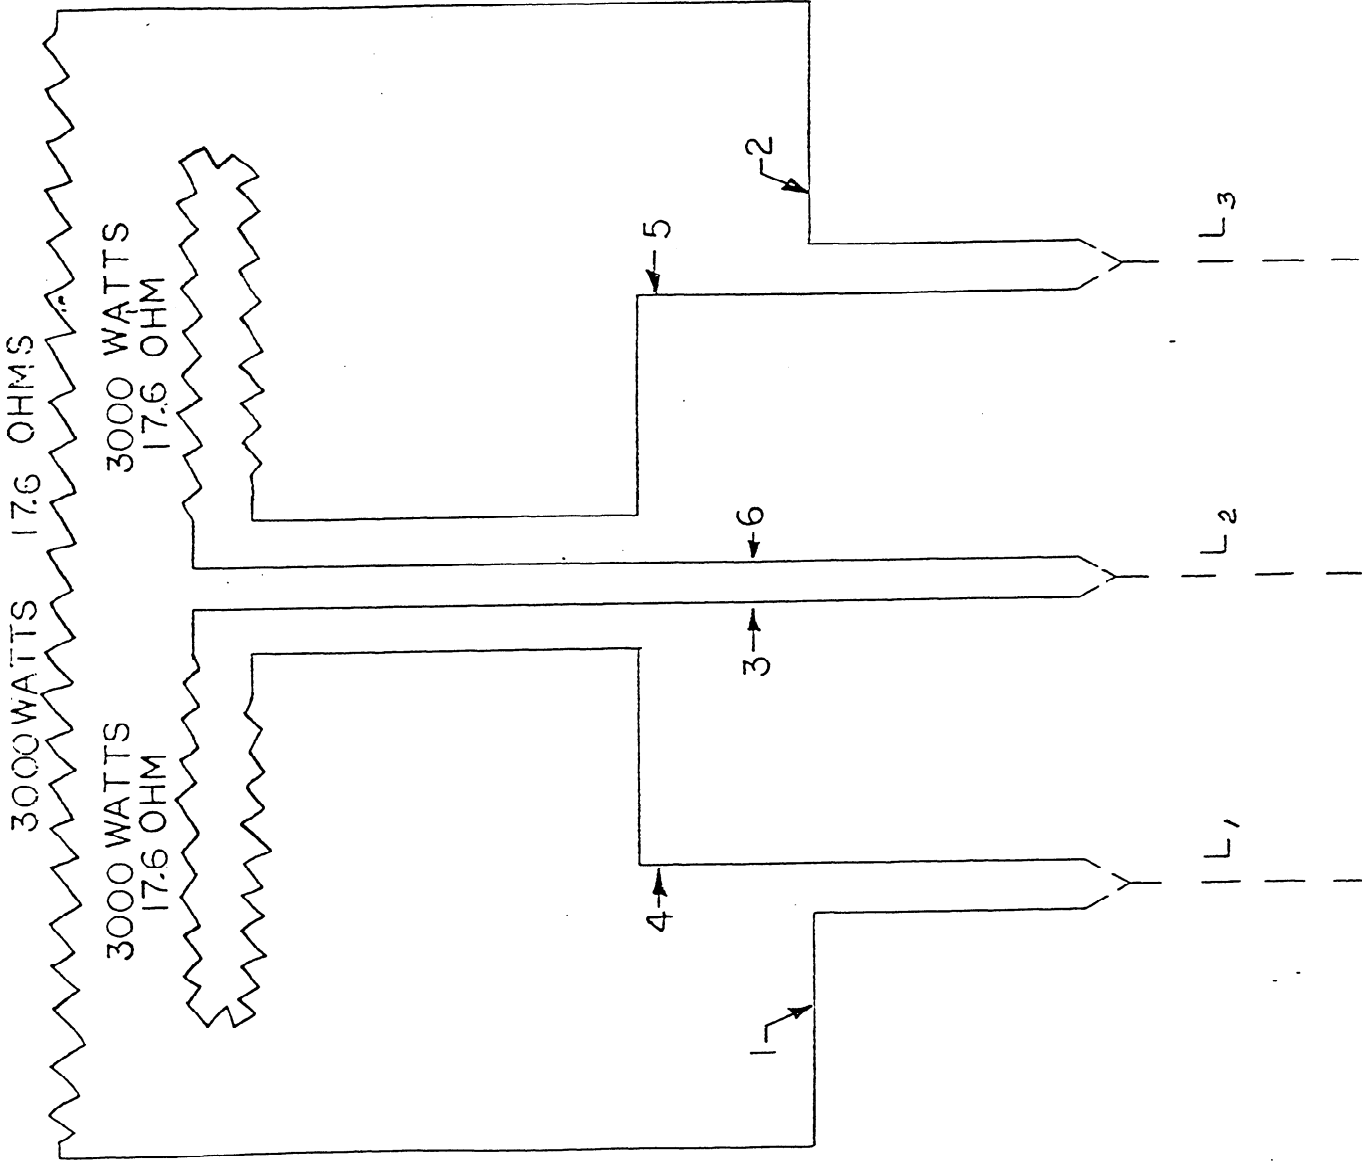


3 PHASE

DEFROST HEATER CIRCUIT

LINE	208 VOLT	220 VOLT
L ₁	20.4 AMP.	21.6 AMP
L ₂	20.4 AMP	21.6 AMP
L ₃	20.4 AMP	21.6 AMP

L5F12

DOTTED LINES INDICATE
FIELD WIRING

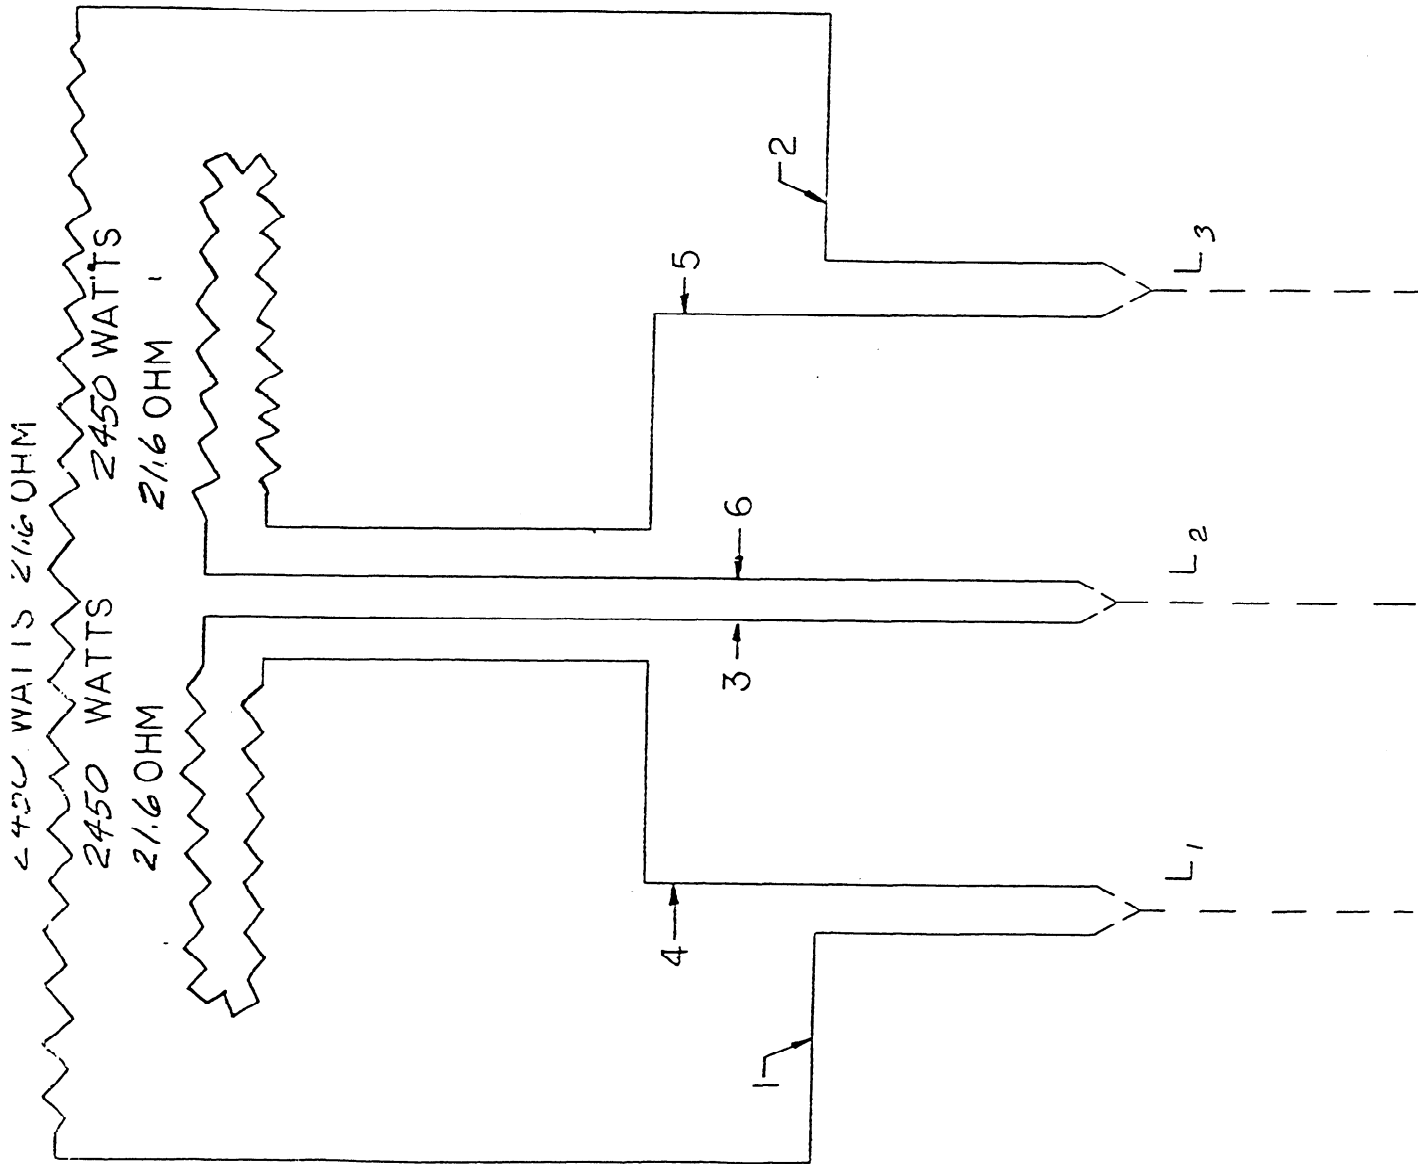


3 PHASE
DEFROST HEATER CIRCUIT

LINE	208 VOLT	220 VOLT
L ₁	16.6 AMP	17.6 AMP
L ₂	16.6 AMP	17.6 AMP
L ₃	16.6 AMP	17.6 AMP

15 F8

DOTTED LINES INDICATES
FIELD WIRING

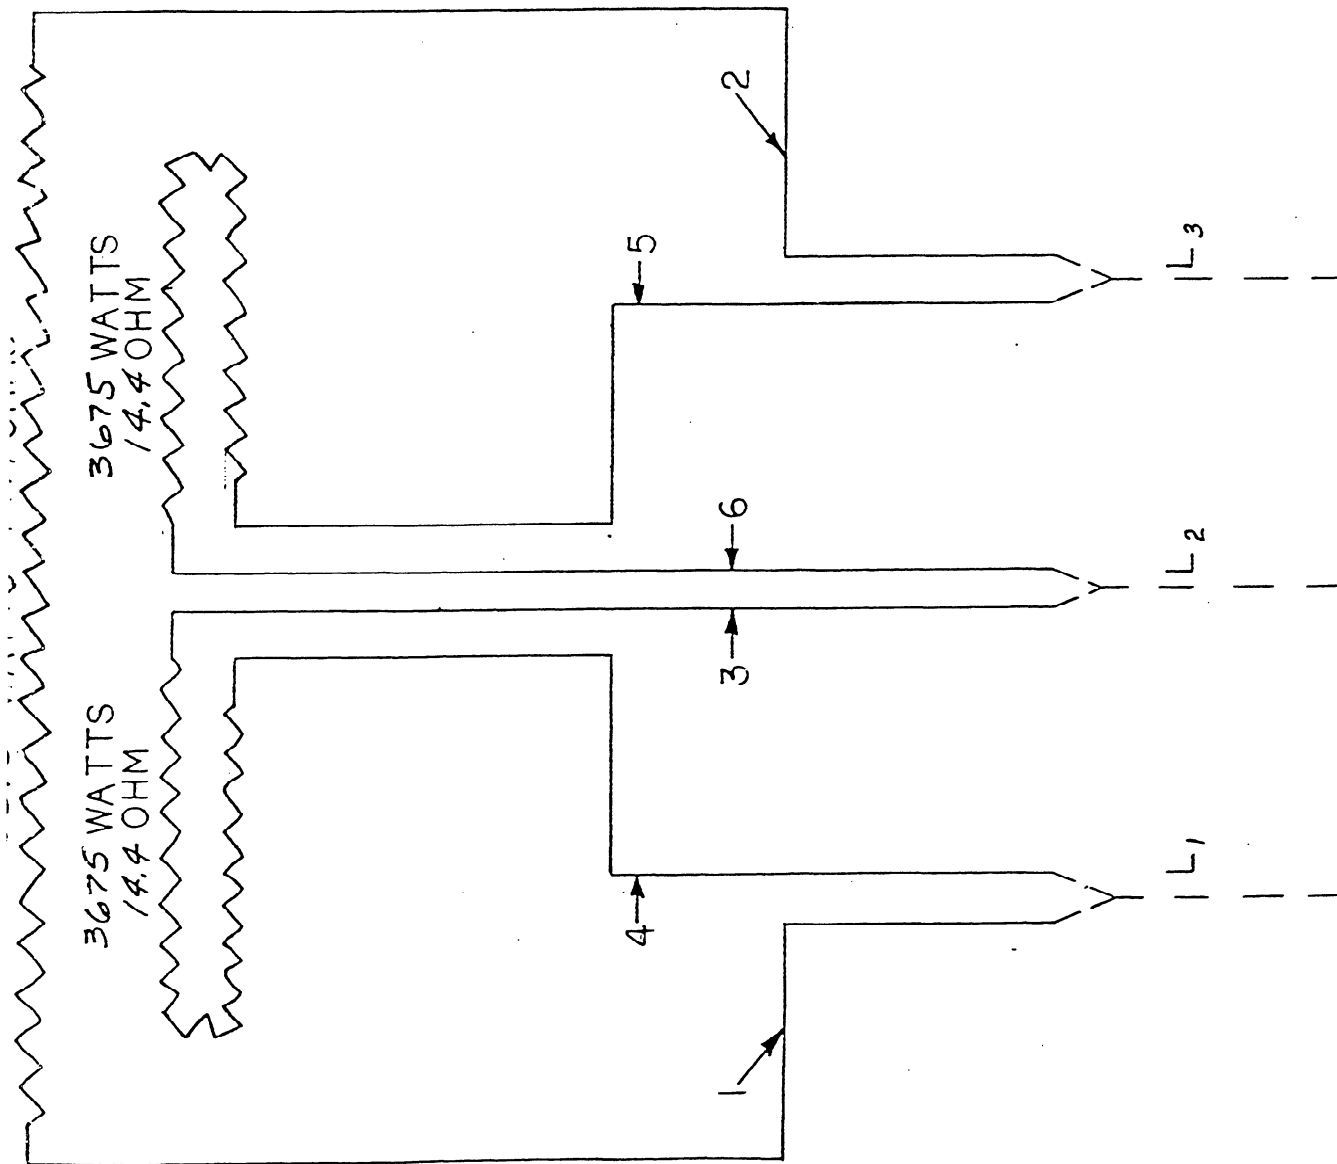

19

3 PHASE

DEFROST HEATER CIRCUIT


LINE	208 VOLT	220 VOLT
L ₁	24.9 AMP	26.3 AMP
L ₂	24.9 AMP	26.3 AMP
L ₃	24.9 AMP	26.3 AMP

15F12

DOTTED LINES INDICATE
FIELD WIRING

SLAVE CASE

MASTER CASE

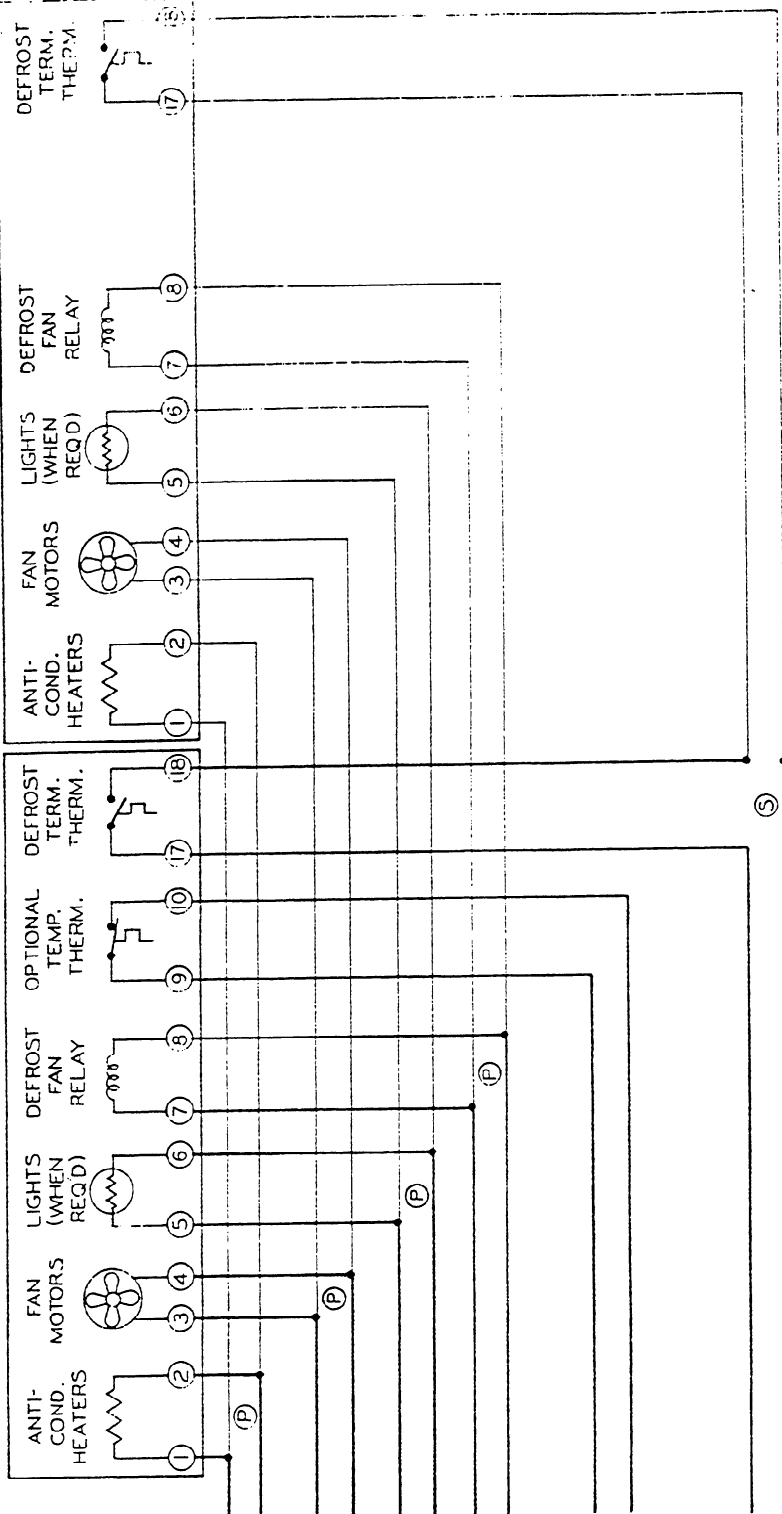

115V. } MAY BE CONNECTED TO ANTI-CONDENSATE CONTROL ON SOME MODELS.

115V. } MUST BE ON CIRCUITS THAT REMAIN ON AT ALL TIMES.

115V. } MAY BE ON CIRCUITS THAT ARE OFF DURING CLOSED HOURS.


115V. OR 230V. } TO DEFROST TERMINALS THIS CLOSE ON DEFROST. CHECK RELAY FOR PROPER RELAY COIL VOLTAGE.

} SEE COMP. OR COND. UNIT FOR COMPLETE DETAILS. WIRE IN SERIES WITH COMPRESSOR CONTACTOR HC ON CONDENSING UNIT & IN SERIES WITH LIQUID LINE SOLENOID ON PARALLEL JN. 3.

} TO DEFROST TERMINATION SOLENOID ON DEFROST CLOCK.

- NOTES: 1) OPTIONAL TEMPERATURE THERMOSTAT IS CLOSE ON RISE. ONE CONTROL REQUIRED PER LINE-UP.
- 2) DEFROST TERMINATION THERMOSTAT IS CLOSE ON RISE. ONE CONTROL PER CASE AND THEY MUST BE WIRED IN SERIES.

LEGEND - (P) THESE LEADS ARE WIRED IN PARALLEL. (S) THESE LEADS ARE WIRED IN SERIES.

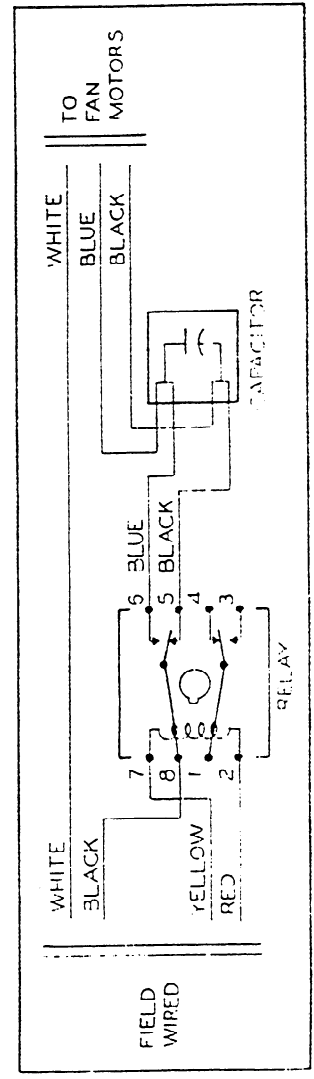


TYPICAL RELAY / CAPACITOR ASSEMBLY
DEFROST RELAY SHOWN IN REFRIGERATION MODE

LETTER	REVISED	DATE
DATE	SCALE	TITLE
SCALE	NONE	TEMPERATURE THERMOSTAT
DRAWN	DEW	(FAN) RELAY (MOUNTED ON CASE)
APP'D		
KYS		DRAWING NUMBER
		215-2-1-1

DEFROST CONTROL SETTINGS

- TIMER DEFROST INTERVAL 6HRS - 4PER DAY
- TIMER MAJSAFE SETTING 30MIN. MAX.
- TIGHTEN DEFROST PINS SECURELY W/ SCREWDRIVER. SEE SERVICE MANUAL FOR COMPLETE INSTRUCTIONS.

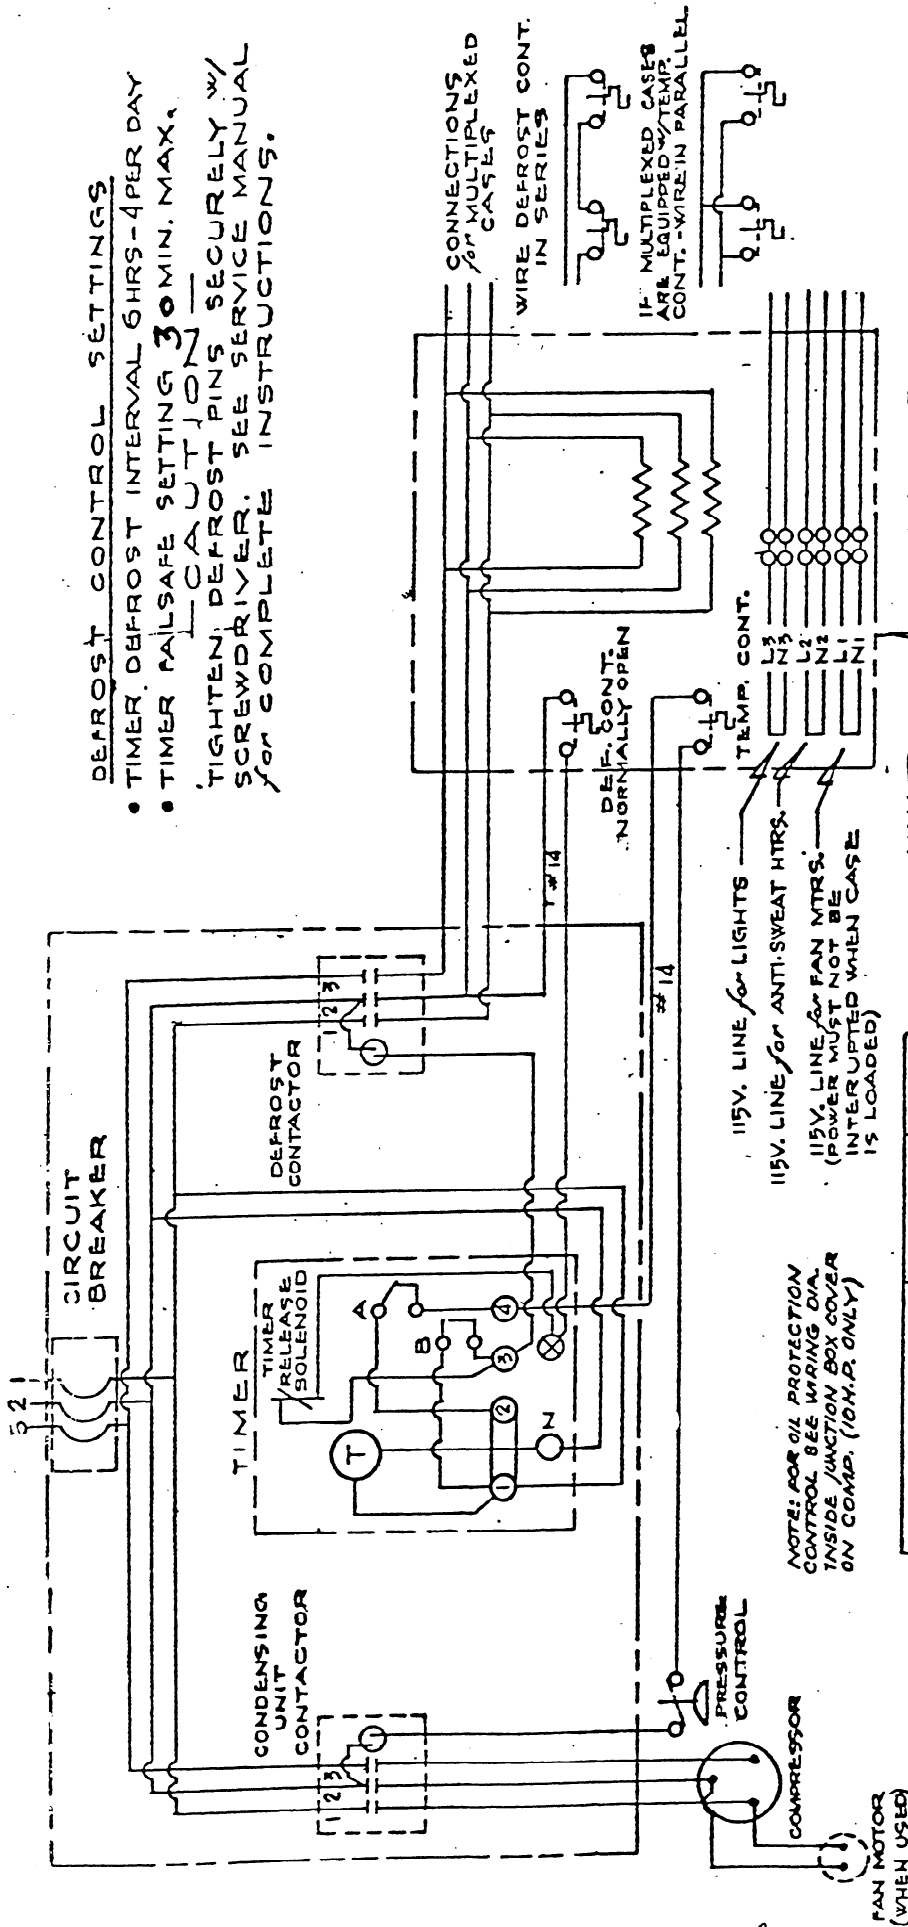


NOTE: FOR OIL PROTECTION CONTROL SEE WIRING DIA. INSIDE JUNCTION BOX COVER ON COMP. (O.M.P. ONLY)

WHEN VOLTAGE IS OTHER THAN 208V. MULTIPLY AMPS BY FACTOR INDICATED	1.00 for 208V.
	1.06 for 220V.
	1.11 for 230V.
	1.15 for 240V.

LENGTH / CASES	WATTS @ 230V.	DEFROST CIRCUIT 3 Ø 60CYCLE			CONTACTOR	WIRE # SIZE
		208V. AMPS LINE 1	AMPS LINE 2	AMPS LINE 3		
8	7350	16.6	16.6	16.6	NONE REQD	12
12	11025	24.9	24.9	24.9	" "	10
16	14700	33.2	33.2	33.2	" "	10
20	18375	41.5	41.5	41.5	" "	10
24 (2-12)	22050	49.8	49.8	49.8	75A-3P	6
24 (3-8)	22050	49.8	49.8	49.8	" "	6
28 (1-8)	25725	58.1	58.1	58.1	" "	6
32 (1-2)	29400	66.4	66.4	66.4	" "	4
36 (3-12)	33075	74.7	74.7	74.7	90A-3P	4

DEFROST CONTROL SETTINGS

TIMER DEFROST INTERVALS 4HRS.-6PER DAY
 TIMER FAULSAFE SETTING - 30 MIN. MAX.
 -CAUTION-
 TIGHTEN DEFROST PINS SECURELY W/
 SCREWDRIVER SEE SERVICE MANUAL
 FOR COMPLETE INSTRUCTIONS

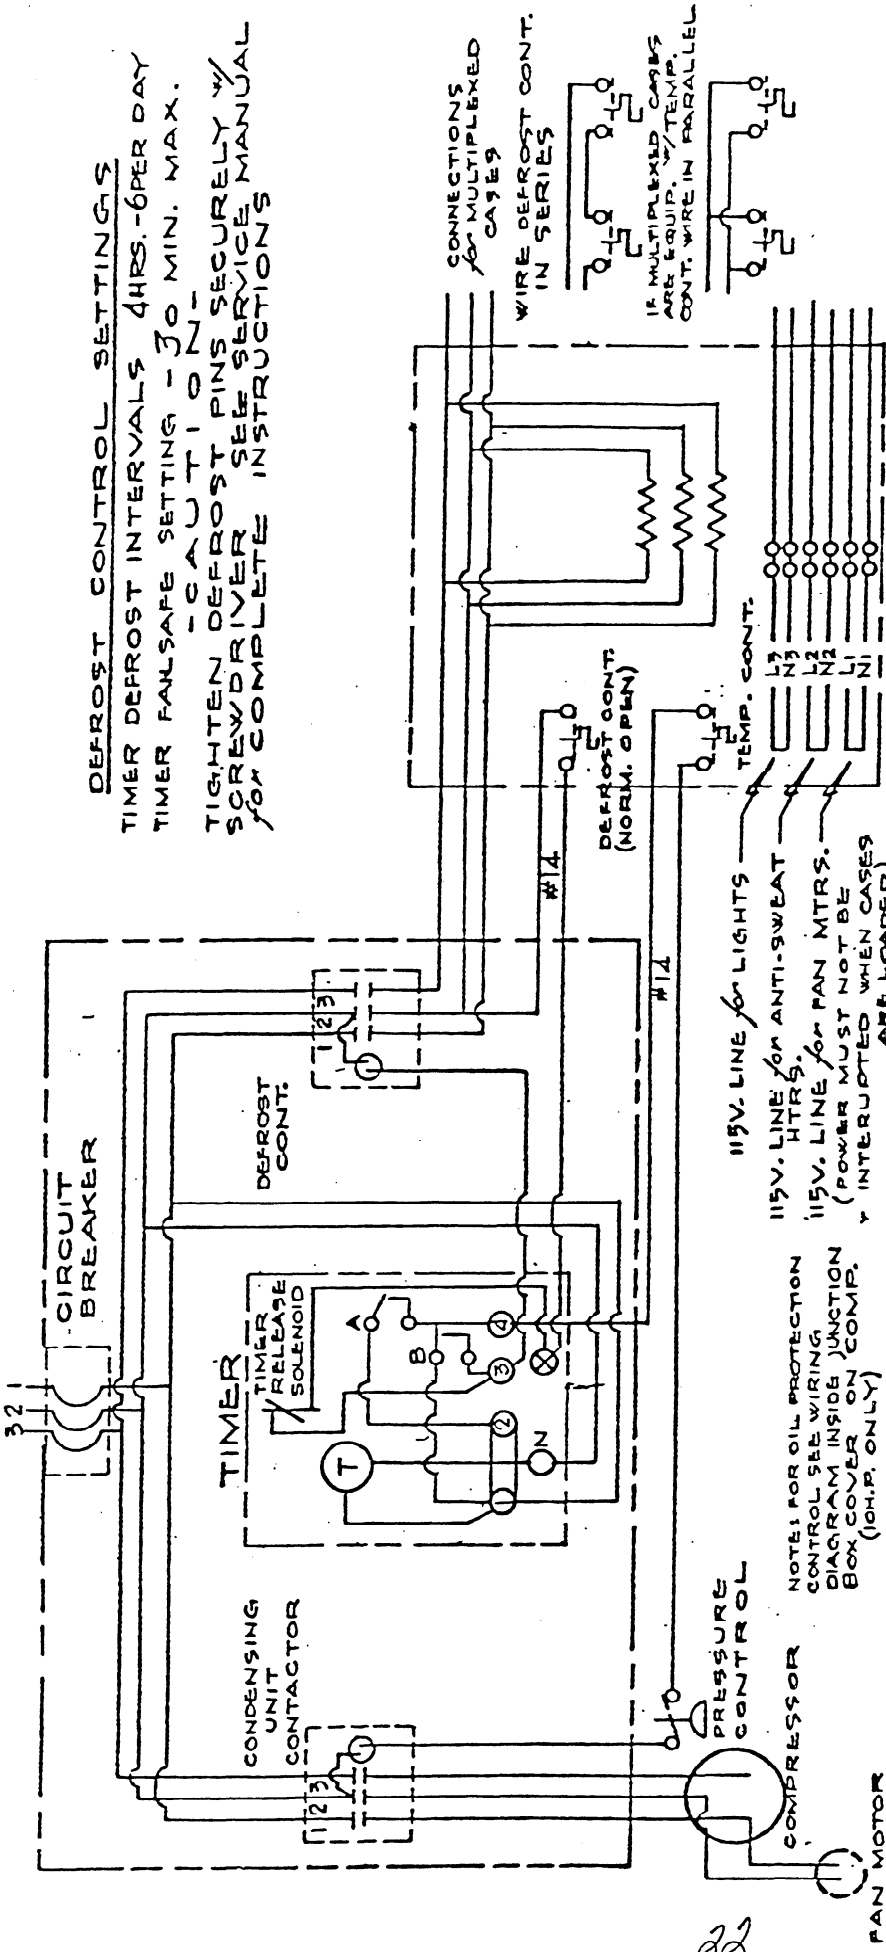


WIRING DIAGRAM
I5F-8 & I5F-12

115V. LINE FOR LIGHTS
 115V. LINE FOR ANTI-SWEAT HTRS.
 115V. LINE FOR FAN MTRS. (POWER MUST NOT BE INTERRUPTED WHEN CASES ARE LOADED)

WHEN VOLTAGE IS	1.00 for 208V.
OTHER THAN 208V.	1.06 for 220V.
MULTIPLY AMPS BY	1.11 for 230V.
FACTOR INDICATED	1.15 for 240V.

LENGTH of CASES	WATTS @ 230V.	DEFROST CIRCUIT 60 CYCLE			
		208V. AMPS LINE 1	208V. AMPS LINE 2	208V. AMPS LINE 3	CONTACTOR WIRE SIZE
8	9900	22.5	22.5	22.5	NONE REQ'D. 10
12	14850	33.6	33.6	33.6	" " 8
16	19800	45.0	45.0	45.0	75A-3P 6
20	24750	56.1	56.1	56.1	" " 4

SYM.	REQ'D.	PART NUMBER	DESCRIPTION
A	1	2-355-00-0817	TRIM-CONNECTOR CANOPY
B	1	2-355-00-1179	TRIM-COLOR BAND UPPER CONNECTOR
C	1	3-038-06-1317	CASTING-JOINT TRIM (#16F10-57)
D	1	2-355-00-1161	TRIM-LOWER FRONT TOP CONNECTOR
E	1	2-355-00-1187	TRIM-LOWER FRONT BOTTOM CONNECTOR
F	1	3-027-03-1107	BOLT 3/8-16 X 1/2" HEX. HD. STL.
G	4	3-027-03-0703	BOLT 3/8-16 X 1/2" HEX. HD. STL.
H	2	3-027-03-0109	BOLT 3/8-16 X 1/2" HEX. HD. STL.
J	12	3-026-04-0802	FLAT WASHER PLT'D. 1/8 X 13/32 X 1 3/8
K	2	3-026-04-0406	FLAT WASHER PLT'D. 3/8
L	7	3-026-01-0607	NUT 3/8-16 HEX.
M	2	3-028-09-0409	SCREW # 6-A X 3/4 TRUSS HEAD
N	2	3-028-05-0106	SCREW # 10-24 X 1/2 TRUSS HEAD
P	8	3-028-07-0310	SCREW # 8-A X 1/2 OVAL HD. N.P.
R	12	3-028-09-0853	SCREW # 10-A X 1/2 TRUSS HEAD
S	3	4-017-05-0107	CAULKING COMPOUND
T	1	2-355-00-1443	TRIM, BASE COVER CONNECTOR

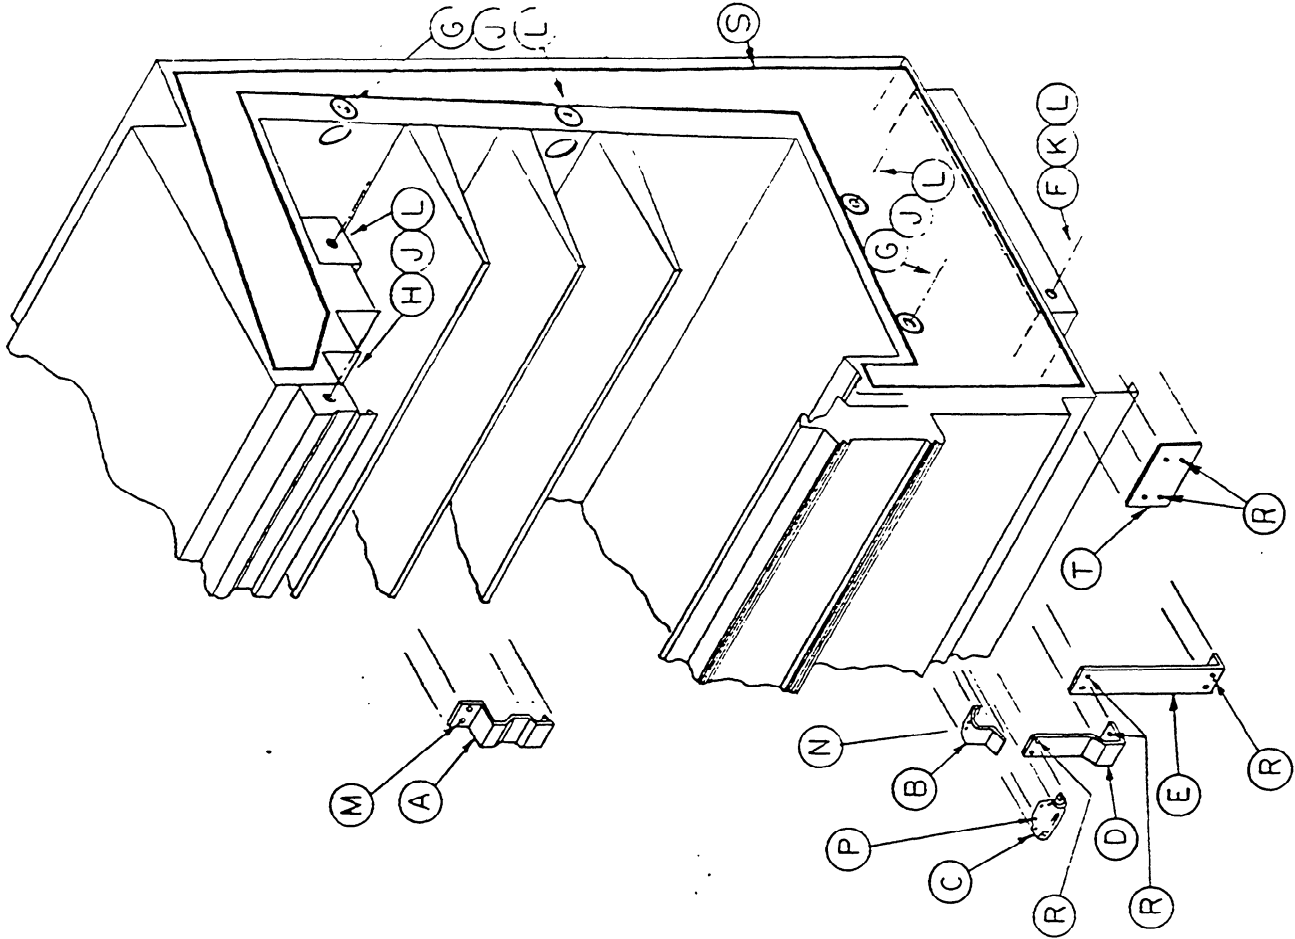


1. Remove case from crate skids and set in final location, remove shipping supports.
Note: Avoid dropping nuts and washers into case as they will plug drain.
2. Check floor for level, how much shimming is required and how service outlets are located. Decide which case to be installed first, move others out of the way.
3. Position remaining cases and level, using metal shims furnished. Level per enclosed instructions. Caulk end of joining case, move into position and adjust to obtain good alignment.
4. Remove (2) round plastic plug buttons at each end of display back panel.
5. Install 3/8-16 X 1/2" long hex bolt, washers and nut in alignment-pull up lugs at the front of base and tighten. Use pry bar to assist tightening of bolt and getting cases tight and in straight line.
6. Install 3/8-16 X 1/2" long hex bolts, washers and nuts in the holes accessible from display area, front, lower back, center and upper back. Install 3/8-16 X 1/2" long hex bolts, washers and nuts in upper front and canopy joining holes.
7. Check alignment and adjust if necessary. Tighten all joining bolt firmly.
8. Install color band trim (sym.B) first, using #10-24 X 1/2 long truss head bolts in threaded fasteners provided in case. Adjust trim for best fit and tighten screws.
9. Install casting (sym.C) over joint as shown and fasten using #8A X 1/2" long oval head N.P.screws.
10. Install lower trim top and bottom (sym.D & E) over joints as shown and fasten using #10A X 1/2 Truss head screws.
11. Install canopy trim (sym.A) which is shaped to fit the canopy and the recessed area in canopy. Locate over the joint and fasten with #6A X 3/4 long truss head screws.

REV. 77124
M78010

0-355-00-0035 JOINT KIT FOR MODELS L5 - 15A

SYM.	REQ'D.	PART NUMBER	DESCRIPTION
A	1	2-355-00-0817	TRIM-CONNECTOR CANOPY
B	1	2-355-00-1179	TRIM-COLOR BAND UPPER CONNECTOR
C	1	3-038-06-1317 16FD0-57	CASTING-JOINT TRIM (#16FD0-57)
D	1	2-355-00-1161	TRIM-LOWER FRONT TOP CONNECTOR
E	1	2-355-00-1153	TRIM-LOWER FRONT BOTTOM CONNECTOR
F	1	3-027-03-1107	BOLT 3/8 - 16 X 4" HEX. HD. STL.
G	4	3-027-03-0703	BOLT 3/8-16x2-3/4" HEX. HD. STL.
H	2	3-027-03-0109	BOLT 3/8 - 16 X 1" HEX. HD. STL.
J	12	3-026-04-0702	FLAT WASHER PLT'D. 1/8 X 13/32 X 1 3/8
K	2	3-026-04-0406	FLAT WASHER PLT'D. 3/8
L	7	3-026-01-0607	NUT 3/8 - 16 HEX
M	2	3-028-09-0409	SCREW #6-A X 3/4 TRUSS HEAD
N	2	3-028-05-0106	SCREW # 10 - 24 X 1/2 TRUSS HEAD
P	2	3-028-07-0310	SCREW # 8-A X 1/2 OVAL HD. N.P.
R	12	3-028-09-0353	SCREW # 10-A X 1/2 TRUSS HEAD
S	3	4-017-05-0107	CAULKING COMPOUND
T	1	2-355-00-1445	TRIM, BASE COVER CONNECTOR

24

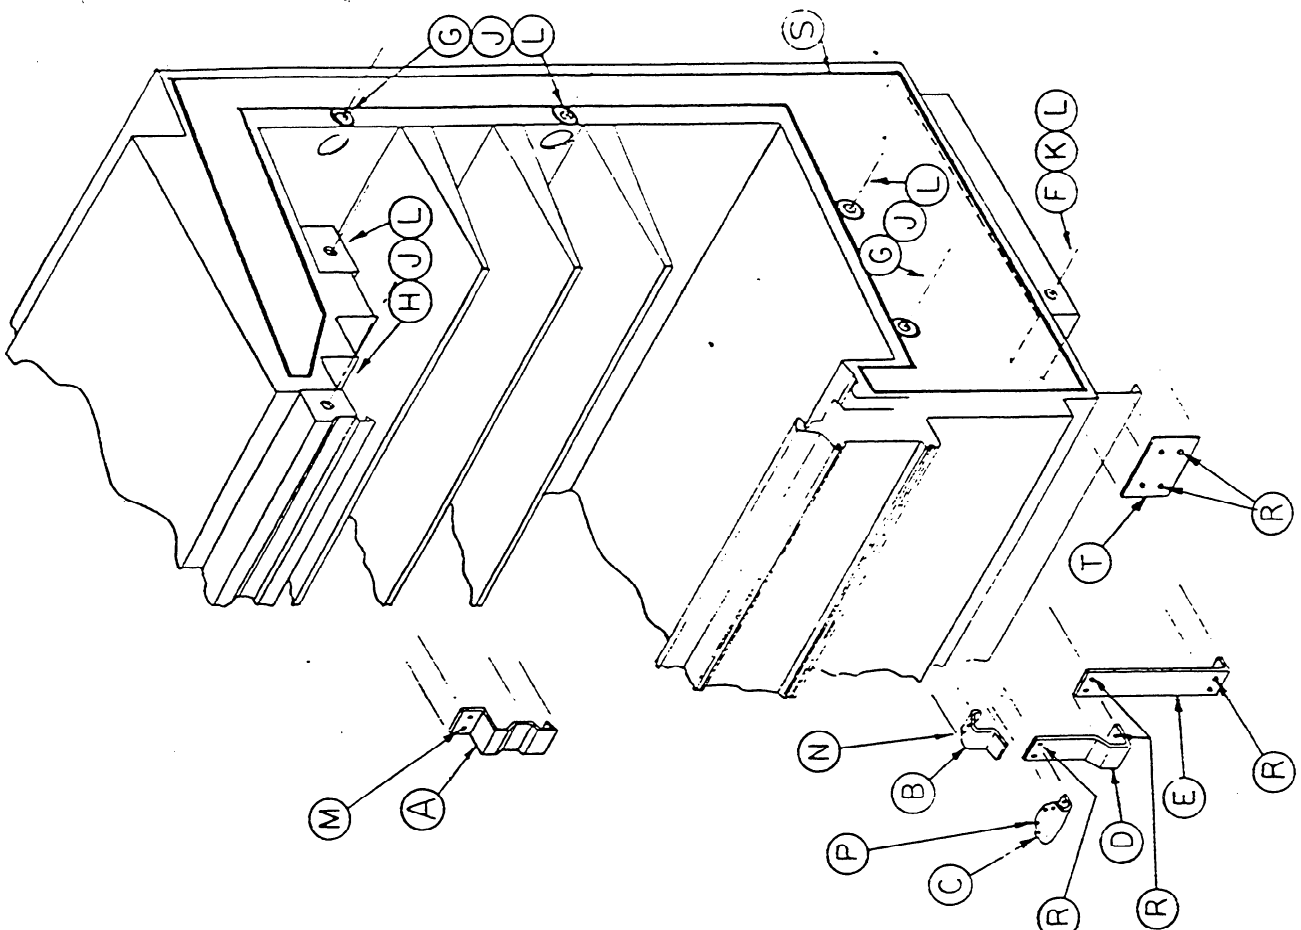


- Remove crane from crane skids and set in final location, remove shipping supports. Note: Avoid dropping nuts and washers into case as they will plug drain.
- Check floor for level, how much shimming is required and how service outlets are located. Decide which case to be installed first, move others out of the way.
- Position remaining cases and level, using metal shims furnished. Level per enclosed instructions. Caulk end of joining case, move into position and adjust to obtain good alignment.
- Remove (2) round plastic plug buttons at each end of display back panel.
- Install 3/8- 16 X 4" long hex. bolt, washers and nut in alignment-pull up lugs at the front of base and tighten. Use pry bar to assist tightening of bolt and getting cases tight and in straight line.
- Install 3/8-16x2-3/4" long hex bolts, washers and nuts in the holes accessible from display area, front, lower back, center and upper back. Install 3/8 - 16 x 1" long hex bolts, washers and nuts in upper front and canopy joining holes.
- Check alignment and adjust if necessary. Tighten all joining bolt firmly.
- Install color band trim (sym.B) first, using # 10- 24 x 1/2 long truss head bolts in threaded fasteners provided in case. Adjust trim for best fit and tighten screws.
- Install casting (sym.C) over joint as shown and fasten using #8A X 1/2" long oval head N.P. screws.
- Install lower trim top and bottom (sym.D & E) over joints as shown and fasten using #10A X 1/2 truss head screws.
- Install canopy trim (sym.A) which is shaped to fit the canopy and the recessed area in canopy. Locate over the joint and fasten with # 6A X 3/4 long truss head screws.

Rev. 7/1/74
M79010

**0-355-00-0027 JOINT KIT FOR MODELS
L4-L4A-L5F-L5FA**

MODEL	SYM.	REQD	PART NUMBER	DESCRIPTION
L5 & L5A	A	1	2-165-00-0163	DIVIDER-TOP RETAINER OUTSIDE
L5 & L5A	B	1	2-165-00-0320	DIVIDER-PLEXIGLAS
L5 & L5A	C	1	2-165-00-0338	DIVIDER-BOTTOM RETAINER OUTSIDE
L5 & L5A	D	2	3-028-09-0854	SCREW # 10-A x 1/2 TRUSS HEAD
L5F & L5FA	A	1	2-165-00-0163	DIVIDER-TOP RETAINER OUTSIDE
L5F & L5FA	B	1	2-165-00-0323	DIVIDER- PLEXIGLAS
L5F & L5FA	C	1	2-165-00-0361	DIVIDER-BOTTOM RETAINER OUTSIDE
L5F & L5FA	D	2	3-028-09-0854	SCREW # 10-A x 1/2 TRUSS HEAD

1. Locate bottom divider (sym.C) in position as shown and fasten in place using 2 screws (sym.D)
2. Place top divider (sym.A) in position between cases then slide plexiglas (sym.B) in grooves provided in metal dividers. Then tighten cases together.
3. Other parts shown are part of Joint kit. See Joint kit section in manual for part numbers.

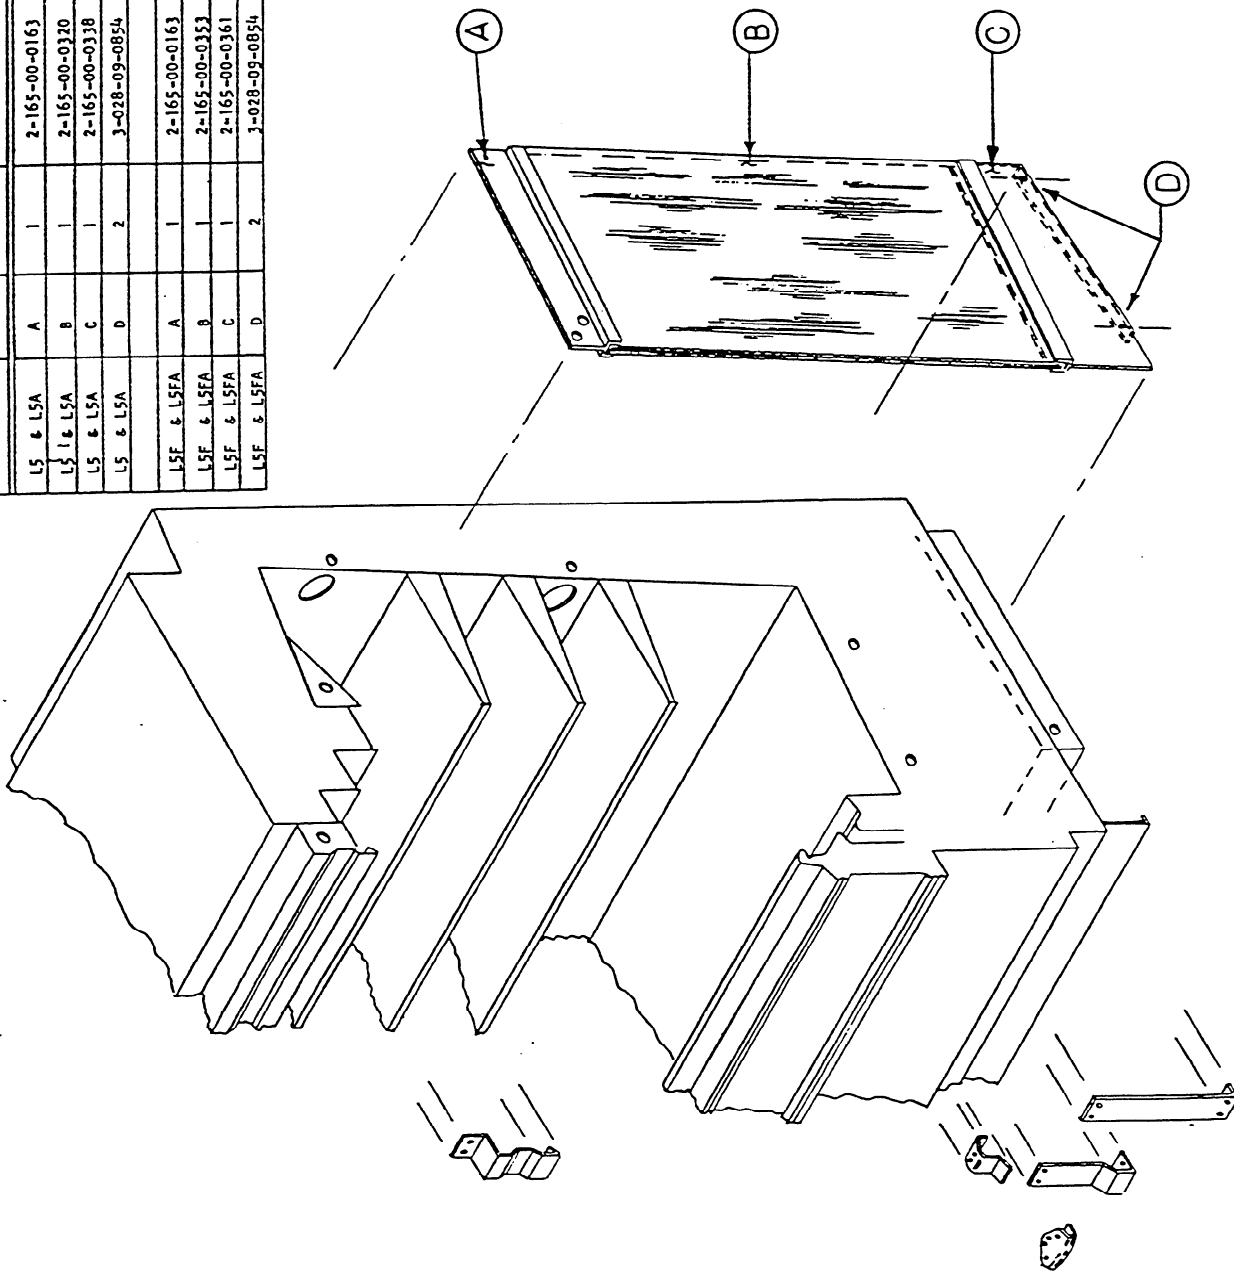


PLEXIGLAS DIVIDER KIT

0-165-00-0050 FOR MODELS L5-L5A

0-165-00-0068 FOR MODELS L5F & L5FA

1

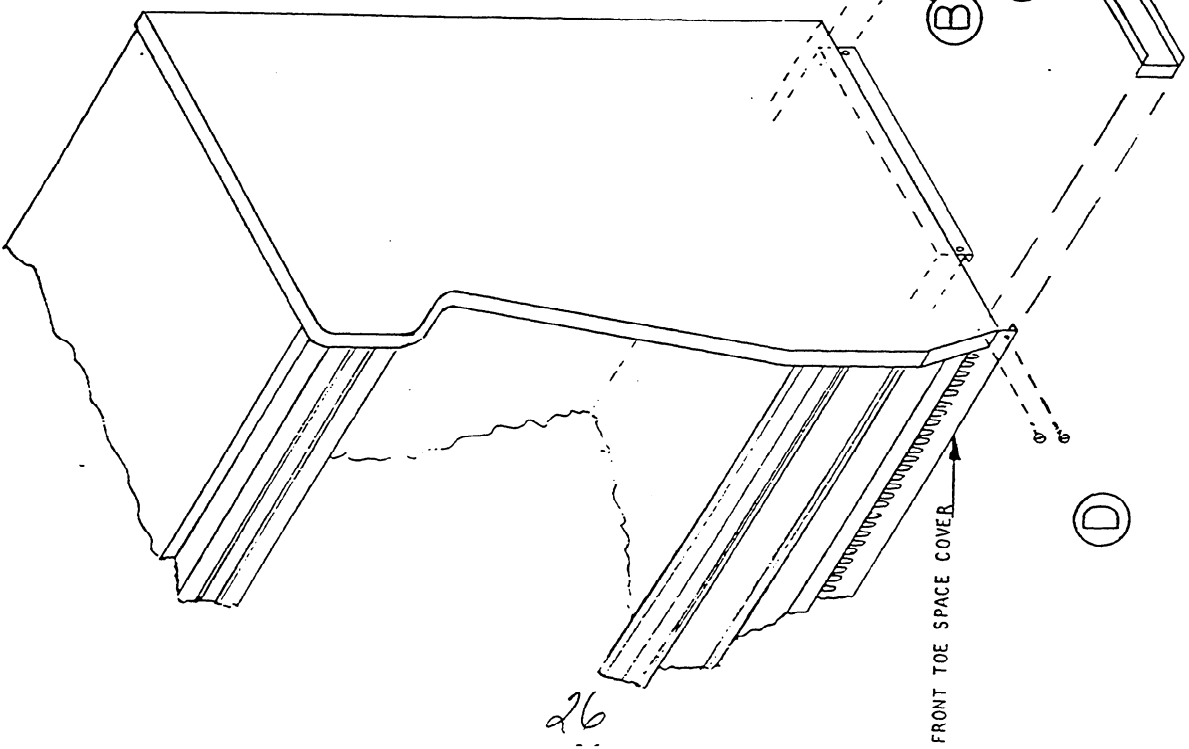

SYM	REQ'D	PART NUMBER	DESCRIPTION
A	1	2-150-00-0467	CLOSURE-TOP SPACE END
B	1	2-130-00-2500	BRACKET-END KICK RAIL CLOSURE
C	2	3-028-06-0105	SCREWS BINDERHEAD 1/2 X 10-24 S.S.
D	2	3-028-06-0303	SCREWS BINDERHEAD 3/4 X 10 S.S.

Case in final position with refrigeration, electrical, drain lines and front toe space cover installed, proceed as follow.

- Depending whether case is standard or has aisle warmer kit.
Position bracket (sym.B) and drill 2-5/32 dia. holes for # 1/2 x 10-24 screws (sym.C) and fasten.
- Drill 2-7/32 dia. holes in front toe space cover 1/2" in from end.
- Position closure toe space end (sym.A) and drill 4 1/8 dia. holes for # 3/4 x 10 SS screw (sym.D) and fasten.

0-170-00-0012 END TOE SPACE COVER
FOR MODELS L4A, L5A OR L5FA

IMPORTANT.

HEALTH AND SANITATION STANDARD FOR RETAIL
FOOD STORE REFRIGERATION

L5(A) and L5F(A) frozen food and ice cream models were designed and built in compliance with CRMA Health and Sanitation Standard CRS-S1-67.

Since sanitation must necessarily be a joint effort of manufacturer, installer and user, recommendations and instructions for both installer and user are listed below. Beyond furnishing practical recommendations, the manufacturer cannot be responsible for unsanitary installation or usage.

INSTALLER'S RESPONSIBILITIES (See Section VII of Standard)

Display cases must be carefully leveled to insure that drains in case can function properly. Shims and other leveling means user must provide a firm support for the case to insure that case will remain level for its useful life.

Manufacturer furnishes a line type drain trap that must be connected to the drain fitting on each cabinet. The trap must be located within 3 ft. of the cabinet and discharge must not be directly connected to sewer line but rather discharge into drain sump. CAUTION: Do not reduce drain line size smaller than what is provided at case. Drain sump is cast aluminum.

Cases must be installed a minimum distance of 3 inches from wall so as to permit adequate ventilation. If cases are installed back to back, a forced ventilating system must be incorporated. A suitable kit can be purchased from manufacturer.

Installing ends and/or joining cases must be according to instructions furnished by manufacturer. Special care must be exercised to insure that joints are sealed properly, especially in lower areas of joint.

Toe space cover panel is adjustable and should be installed to make a sanitary joint with floor. If floor is irregular or an unusual amount of shimming was necessary to level cases so that range of adjustment on panel furnished is exceeded, installer must provide and install additional materials as required or advise owner of condition so he can arrange to have corrections made.

The open space between wall and end of case must be neatly closed with hardboard or other material acceptable to owner so as to prevent the accumulation of debris back of case.

Space between wall and top of case must be covered with a suitable screen or grille to guard from debris finding its way into this space.

Since proper temperatures are most important for sanitation, installer must make sure cases are performing properly before he permits owner to load cases with product. Temperature of air discharging from honeycomb must be zero degrees or lower except during defrost cycle.